


biogas 2

building a better biogas unit

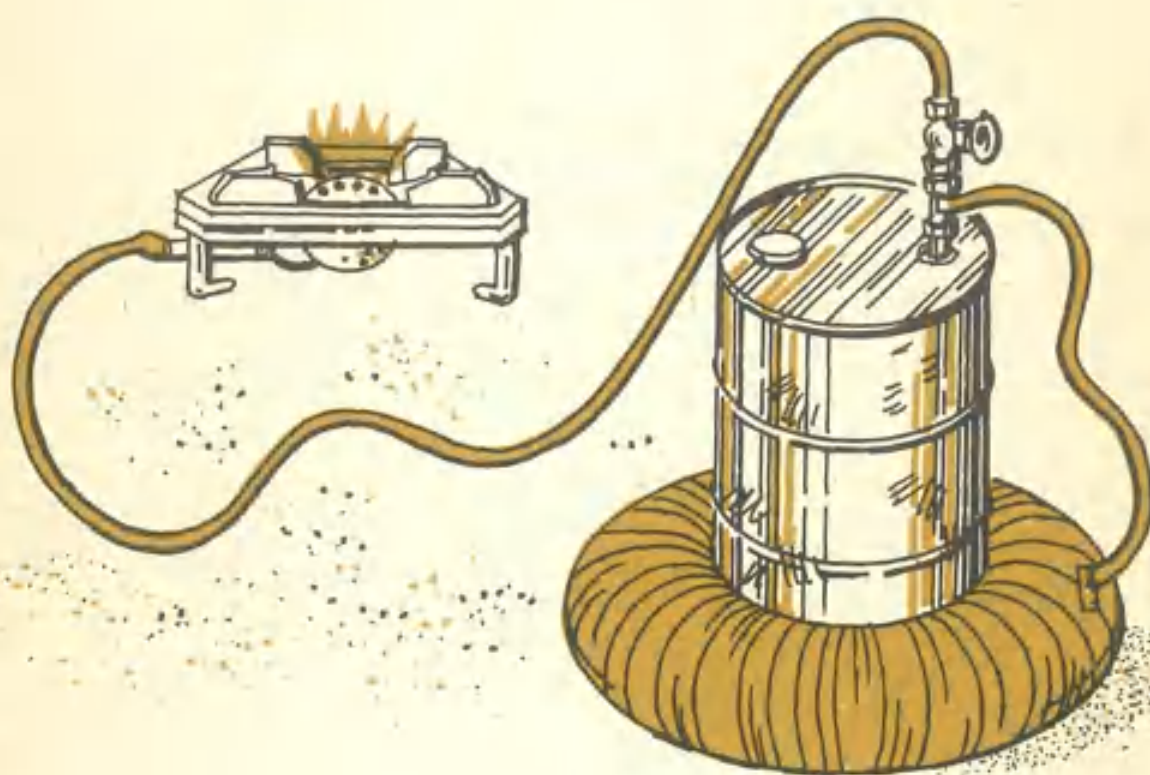

BETTER FARMING SERIES

The titles published in this series were designed as handbooks for an intermediate-level agricultural education and training course. They may be purchased as a set or as individual documents. New titles will be added from time to time.

1. The plant: the living plant; the root
2. The plant: the stem; the buds; the leaves
3. The plant: the flower
4. The soil: how the soil is made up
5. The soil: how to conserve the soil
6. The soil: how to improve the soil
7. Crop farming
8. Animal husbandry: feeding and care of animals
9. Animal husbandry: animal diseases; how animals reproduce
10. The farm business survey
11. Cattle breeding
12. Sheep and goat breeding
13. Keeping chickens
14. Farming with animal power
15. Cereals
16. Roots and tubers
17. Groundnuts
18. Bananas
19. Market gardening
20. Upland rice
21. Wet paddy or swamp rice
22. Cocoa
23. Coffee
24. The oil palm
25. The rubber tree
26. The modern farm business
27. Freshwater fish-farming: how to begin
28. Water: where water comes from
29. Better freshwater fish-farming: the pond
30. Better freshwater fish-farming: the fish
31. Biogas: what it is; how it is made; how to use it
32. Biogas 2: building a better biogas unit

biogas 2

building a better biogas unit

P-69

ISBN 92-5-102392-1

PREFACE

The first twenty-six volumes in FAO's Better Farming Series were based on the **Cours d'apprentissage agricole** prepared in Côte d'Ivoire by the **Institut africain de développement économique et social** for use by extension workers. Later volumes, beginning with No. 27, have been prepared by FAO for use in agricultural development at the farm and family level. The approach has deliberately been a general one, the intention being to constitute basic prototype outlines to be modified or expanded in each area according to local conditions of agriculture.

Many of the booklets deal with specific crops and techniques, while others are intended to give the farmer more general information which can help him to understand **why** he does what he does, so that he will be able to do it better. This booklet was added to the series owing to the favourable comments received on Booklet No. 31, **Biogas: what it is; how it is made; how to use it**. Both booklets have been based on published works by researchers and experimenters in small-scale biogas production in Africa, Asia, Europe and North America.

Adaptations of the series, or of individual volumes in it, have been published in Amharic, Arabic, Bengali, Creole, Hindi, Igala, Indonesian, Kiswahili, Malagasy, SiSwati, Thai and Turkish.


Requests for permission to issue this manual in other languages and to adapt it according to local climatic and ecological conditions are welcomed. They should be addressed to the Director, Publications Division, Food and Agriculture Organization of the United Nations, Via delle Terme di Caracalla, 00100 Rome, Italy.

OUTLINE OF THE BOOKLET

● Introduction	1
● How to build a better small unit	5
You will need	5
Cleaning the oil drum	8
Where to put your biogas unit	11
Preparing the oil drum	11
Testing for leaks	15
Preparing the gas holder	20
Attaching the gas holder	24
● Putting in the waste	28
The waste materials	28
The starter	29
Putting waste in this biogas unit	30
After the waste is in	33
● Time	35
● Temperature	36
Cold weather protection	36
● Scum	37
● When the gas is made	36
● Taking care of your biogas unit	42
● Making more biogas	44
● What more can you do?	45
Another kind of biogas unit	46

INTRODUCTION


1. You have already built one or more biogas units like the one described in the Better Farming Series Booklet No. 31; **Biogas: what it is; how it is made; how to use it.**

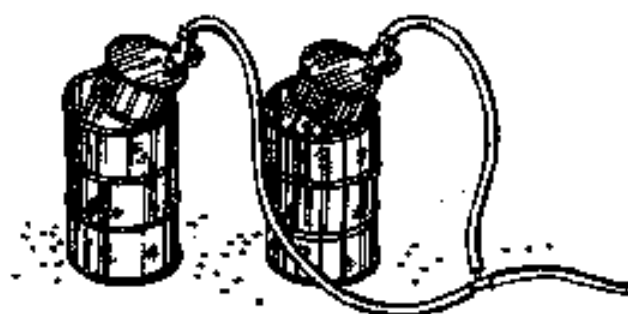


2. When you first began you found that you had to learn a lot of new things in order to make your unit work.
3. However, little by little you have learned more and more through your own experience.
4. When your first gas was made you used it for cooking. You found that cooking with gas was cleaner, easier and faster than cooking with kerosene, charcoal or fuelwood.




5. Now that you know more about biogas and how it is made, let us look at another way to make biogas even better.
6. In this booklet you will learn how to build and use a **better** small biogas unit like the one shown below.

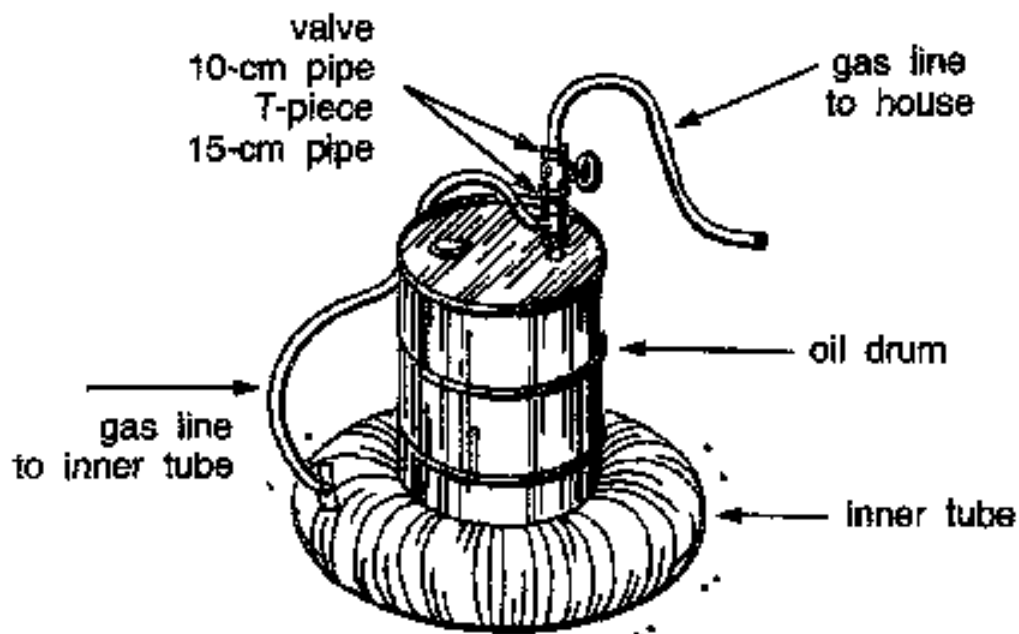

7. If you have an oil drum for a waste holder and, like your first small unit, all the waste is put in **at one** time when you begin.
8. However, the new unit is closed. A closed unit is cleaner. You cannot smell the waste after you have put it in as you could with your old unit.
9. In addition, with your old unit some of the gas was lost from around the open sides of the oil-drum waste holder.

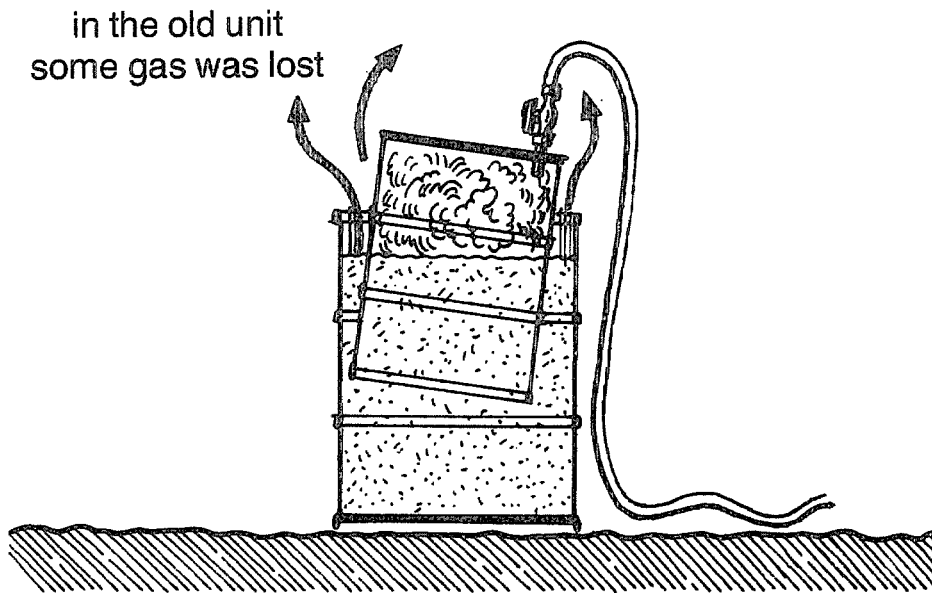


10. Since the new unit is closed
you will **not** lose any gas.
You can collect it all
so you will have more gas to use.

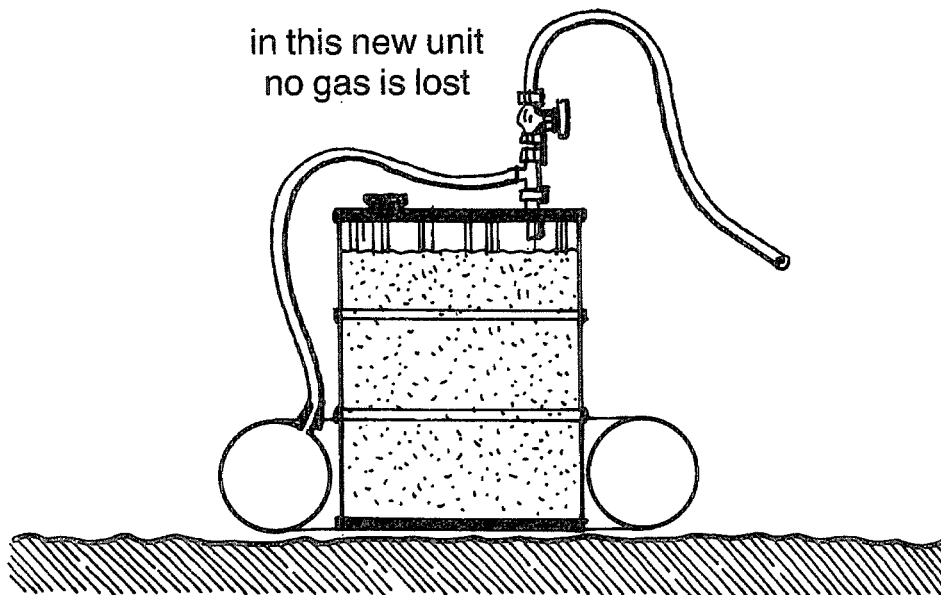

11. Notice in the closed unit
(see the drawing above)
that the oil drum is filled
nearly to the top with waste.
There is little space to hold gas.

12. So, you will need something to collect the gas.
In the new unit,
the gas holder is a used inner tube
as you can see in the drawing
on page 2 in this booklet.
13. This new biogas unit
looks much like your old unit
and it works in much the same way.
You already know a lot of the things
that you need to know
to put this new unit together.
14. However, before you begin
it would be a good idea
to read Booklet No. 31 again.

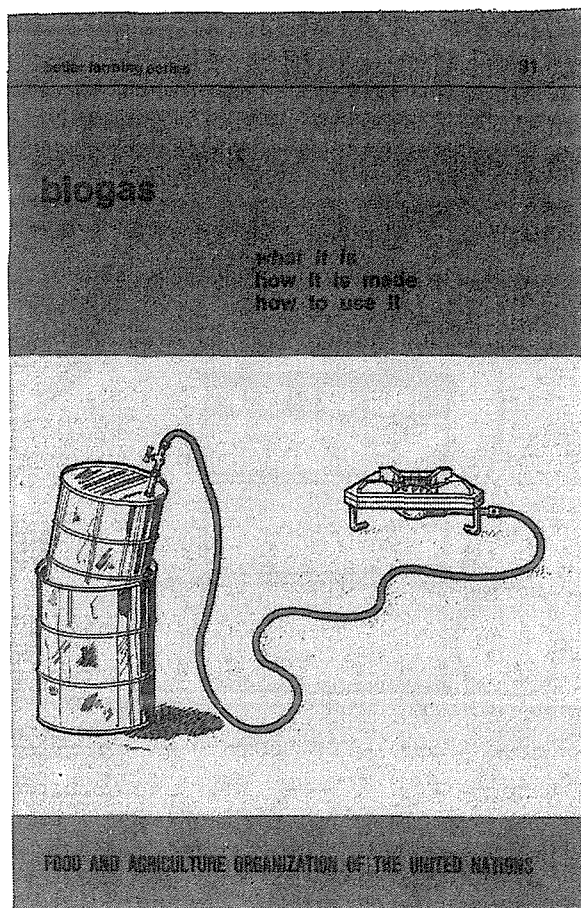

HOW TO BUILD A BETTER SMALL UNIT

You will need

- an oil drum of about 200 litres, to hold the waste

200-litre drum



- a piece of pipe about 15 centimetres long and about 2 centimetres in diameter to fit the oil drum, for the gas outlet


gas outlet




- a pipe T-piece, to connect the gas outlet to the inner tube



- a piece of pipe
about 10 centimetres long
to fit the T-piece

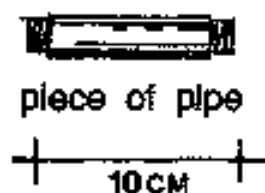

- a valve to fit
the 10-centimetres pipe

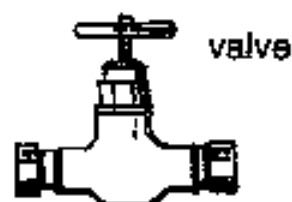


Note

The drawing on page 14 in this booklet shows you how these pipe fittings are attached to the oil drum.

- at least 12 metres
of rubber or plastic tube,
about 2 centimetres in diameter,
for the gas lines



- one or more inner tubes,
to collect the gas

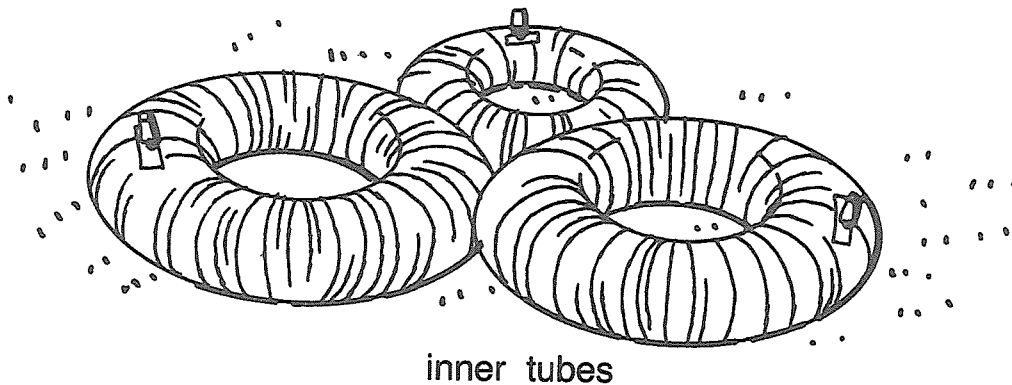


inner tubes

- if you are using more than one inner tube, you will also need one or more small T-pieces to connect the inner tubes.



15. The oil drum should have one hole for putting in the waste and another hole for the gas outlet. Many drums have threaded holes with threaded plugs to close them.
16. Try to find an oil drum with threaded holes in the top. That way it will be easier to build this unit and to make it airtight.

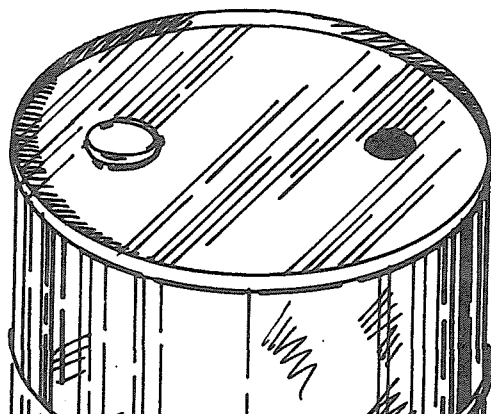


drum with two threaded holes

Cleaning the oil drum


17. Begin by cleaning the drum inside and outside to remove all oil and grease.
18. Take the metal plugs out of the holes and put them carefully aside, so that you can find them later.
19. First clean the **inside** of the drum. Pour in a bucket or two of warm, soapy water or other cleaner. Then close all of the holes.



20. Put the drum on its side. Roll it back and forth so that the soapy water or cleaner can wash the whole inside. Then open the holes and empty out the water.

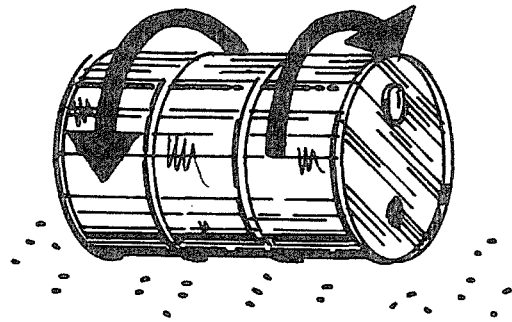


roll drum to clean

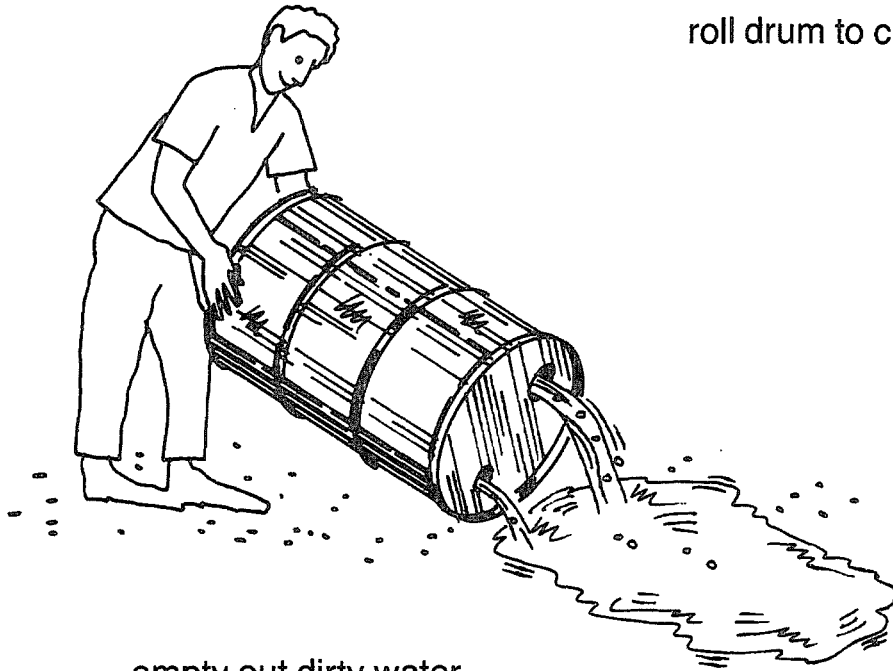


empty out dirty water

21. Continue to wash the inside of the oil drum with soapy water or cleaner until it is completely clean.
22. You can tell the oil drum is clean when the water you empty out is clean.
23. When you are sure that the inside is clean, pour in three buckets of fresh water and roll the drum back and forth once more. This is to rinse out any soap or cleaner that is still inside. Then empty it out again.

24. Now clean the **outside** of the drum with a brush and soapy water or cleaner. Rinse it with fresh water.
25. Open the holes in the top and put the drum on stones with the top down. Let it drain and dry.

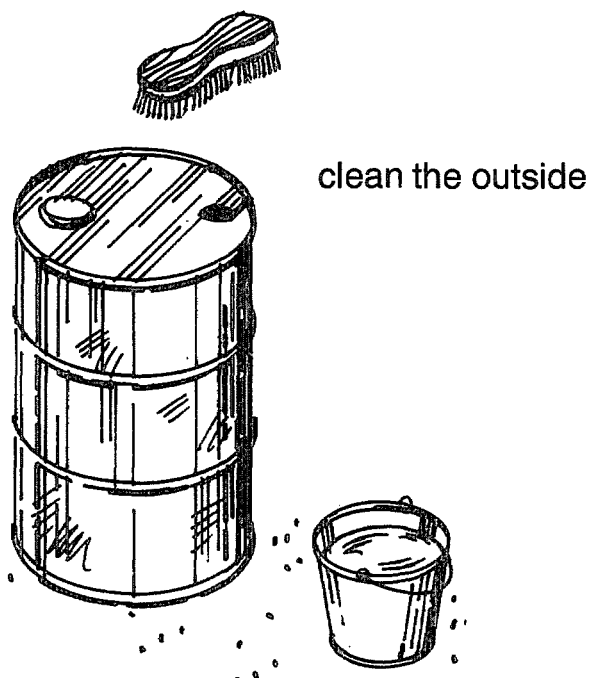

raise the drum on stones
and let it drain and dry

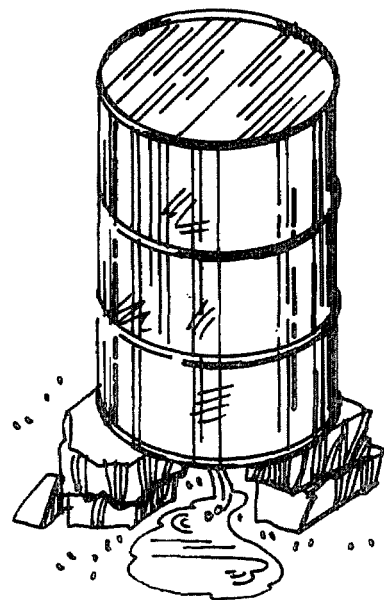



26. When the drum is dry inside and out you are ready to begin.

Where to put your biogas unit


27. Before you build your new biogas unit you should decide where to put it. Items 26 to 34 in Booklet No. 31 will tell you where.
28. However, **do not put this unit underground.** If the unit is underground you will not be able to shake it to break up the scum (see Items 109 to 113 in this booklet).

Preparing the oil drum


29. If your oil drum has a hole in its side, close it tightly. You can use a threaded metal plug or weld a piece of metal over the hole.

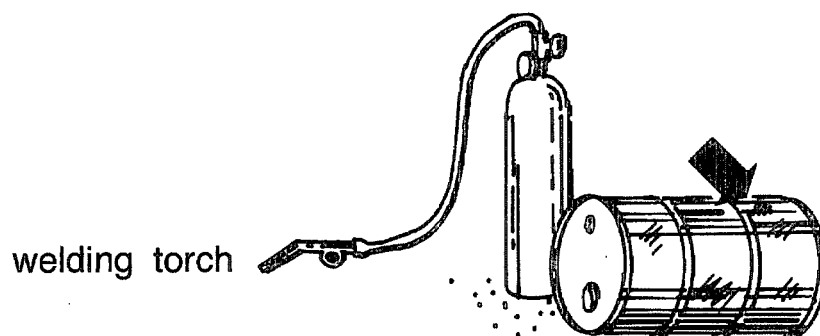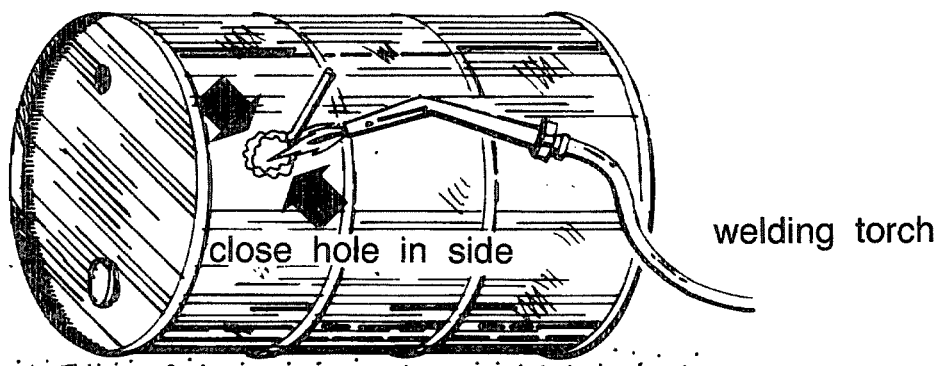


30. Now you are ready to put the gas outlet in the top of the drum.
31. If your drum has two holes in the top, use the smallest one for the gas outlet. Save the largest one for putting in the waste.
32. The gas outlet is made from a piece of pipe about 15 centimetres long and about 2 centimetres in diameter. However, it should fit the hole in the drum.
33. If the hole **is** threaded, use an outlet pipe that is threaded on both ends. Screw it tightly into the hole.

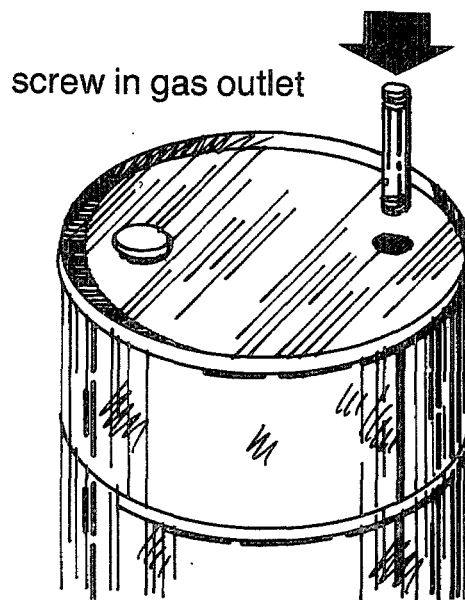


34. If the hole **is not** threaded, use an outlet pipe that is threaded on one end. Weld it into the hole with the threaded end up.

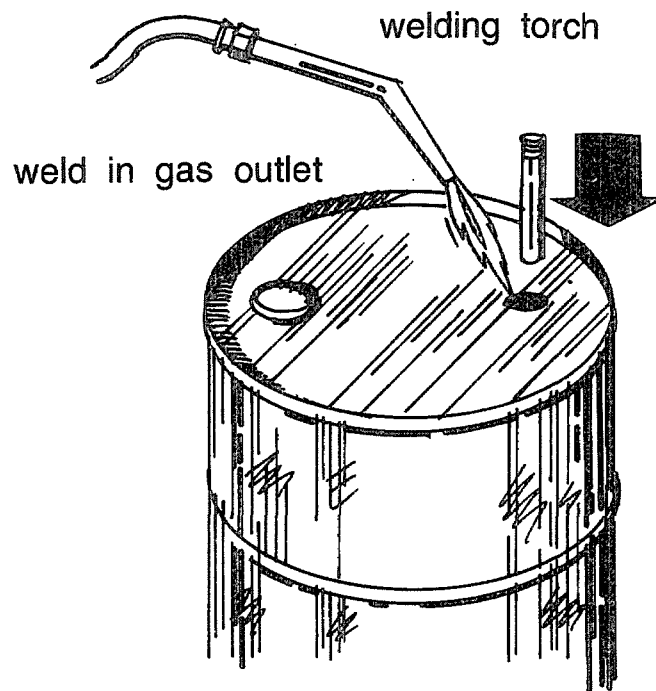

35. If there is **only one** threaded hole in the top of the oil drum, use it to put in the waste.
36. Then you will have to cut a hole about 2 centimetres in diameter for the gas outlet.
Weld in a pipe that is threaded on one end, as shown in the drawing at the top of this page.

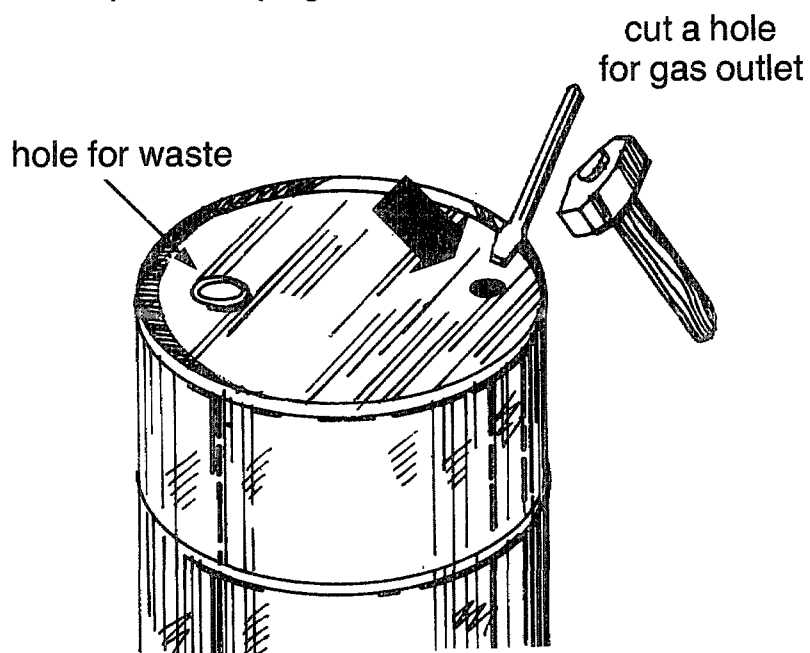

37. Now you are ready to attach the pipe T-piece, the 10-centimetre piece of pipe and the valve.
38. The valve you use must be airtight so that it will not leak gas. You must be sure to screw all of these pieces tightly to the gas outlet.

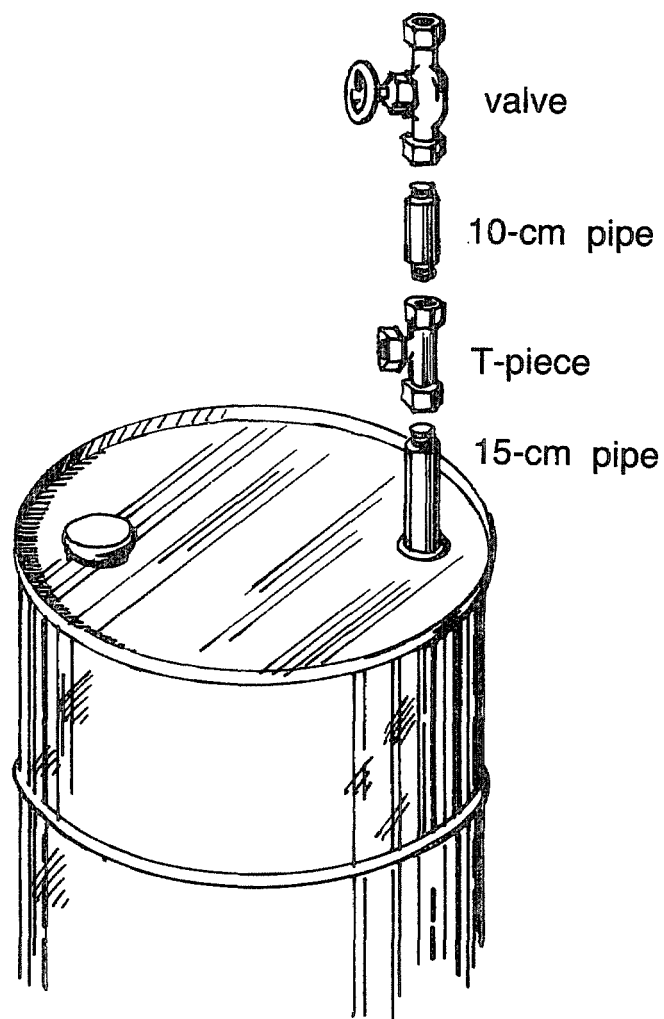


Note

If you do not have a valve, you can tie or clamp the gas line to stop the flow of gas (see Item 48 in Booklet No. 31).

Testing for leaks


39. Now you are ready to test the drum for leaks. To make biogas, **the drum must be airtight.**
40. To test for leaks, open the valve, take out the metal plug in the waste hole and fill the drum with water.

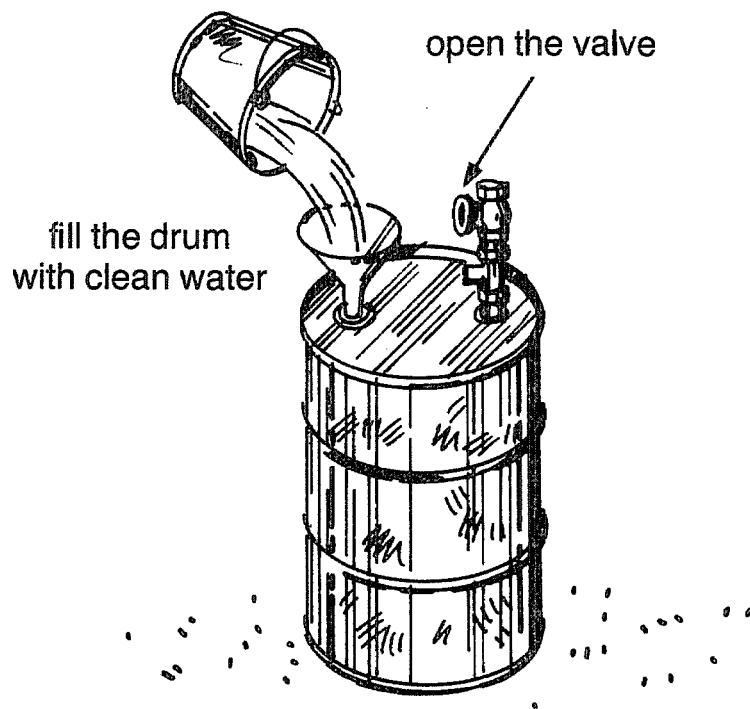


41. **Be sure** to fill it to the top. Then close the valve and put the metal plug back in the waste hole.
42. Use a piece of cloth to dry any water that you have spilled on the outside of the drum.

43. If you see water leaking from anywhere on the drum, mark the place of each leak.

mark each leak

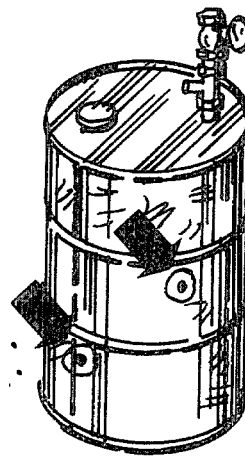



44. Then turn the drum over on its side.
When the drum is full of water it is very heavy,
so ask someone to help you.

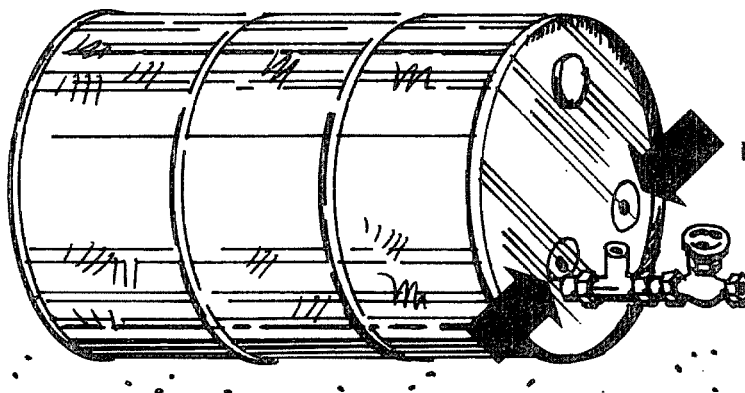

mark each leak

45. Now check for leaks on the top part of the drum and around the gas outlet, T-piece and valve.
If there are leaks here, mark them too.



46. Then open the valve,
take out the metal plug
and empty out the water.
Raise the drum on stones
with the top down
so it can drain dry.

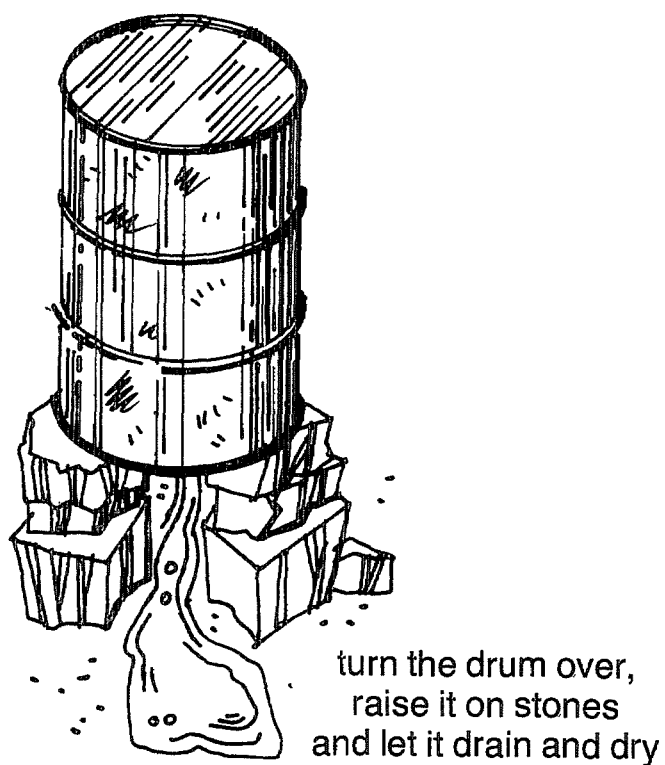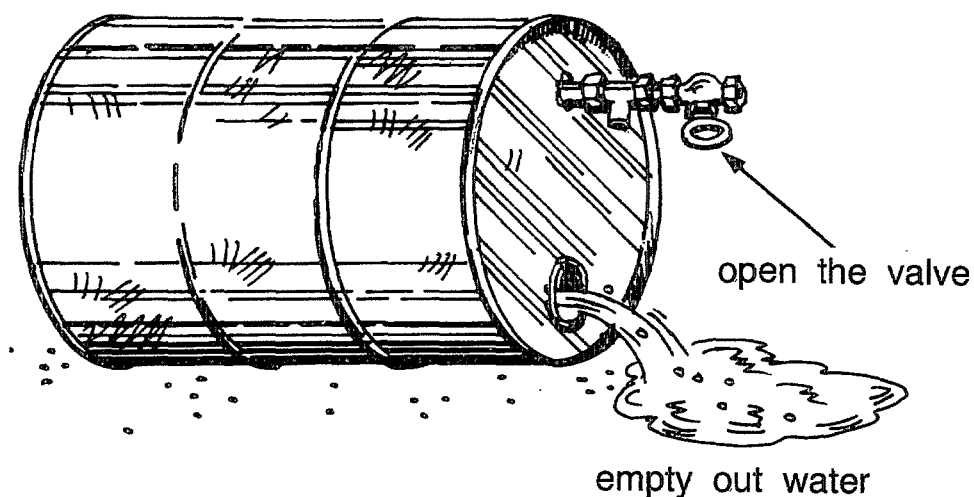


Note

When you put the drum on stones,
be very careful
not to damage the gas outlet,
the pipe T-piece or the valve.

47. Seal the leaks by coating them with tar, mastic or paint. If there are any leaks around the gas outlet, tighten the outlet, T-piece and valve again. Coat the joints with tar, mastic or paint.

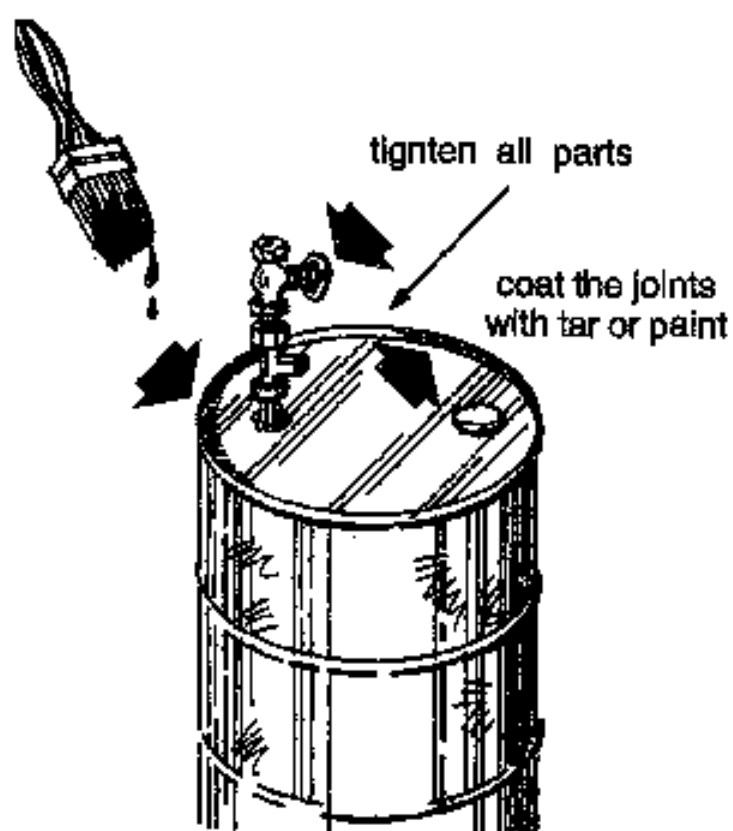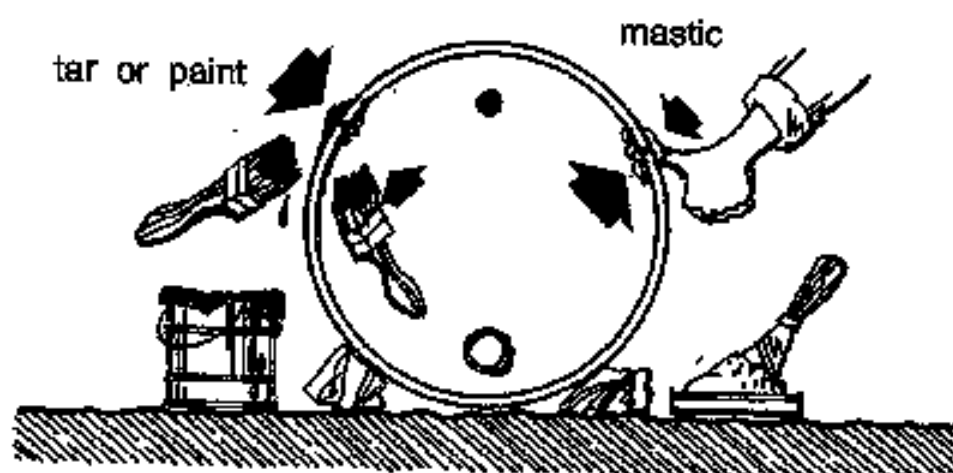


48. When the sealing is dry,
fill the drum with water again.
Check that all the leaks are sealed.
If the drum still leaks,
empty out the water
and let it dry.

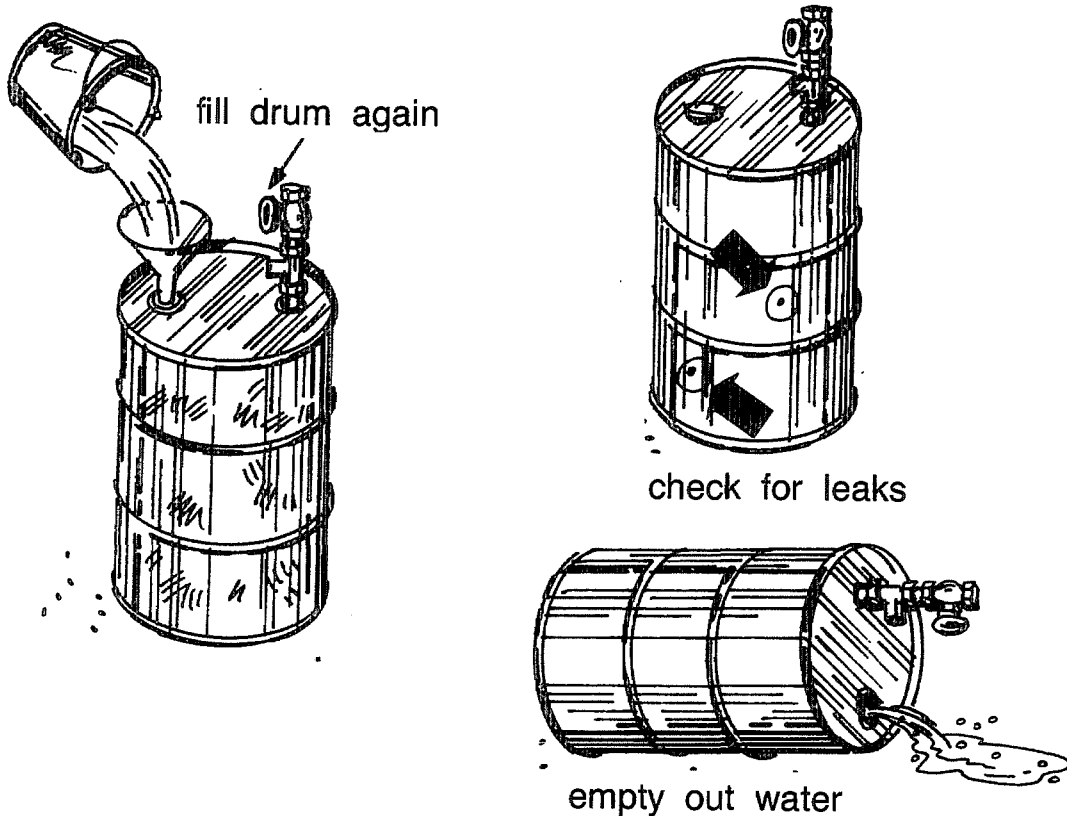


49. Put some tar or paint
inside the drum.
Then turn the drum
around and around
to coat the inside of it.
50. Fill the drum with water again.
If it still leaks,
start all over again.
**It is very important
to seal all leaks carefully.**
51. When the drum is well sealed
and no longer leaks,
let it dry completely.
Now you can begin to prepare
the gas holder.

Preparing the gas holder


52. As you have been told, this unit has an inner tube which holds the gas.
53. If you can get a large truck or tractor inner tube, you will need only one.

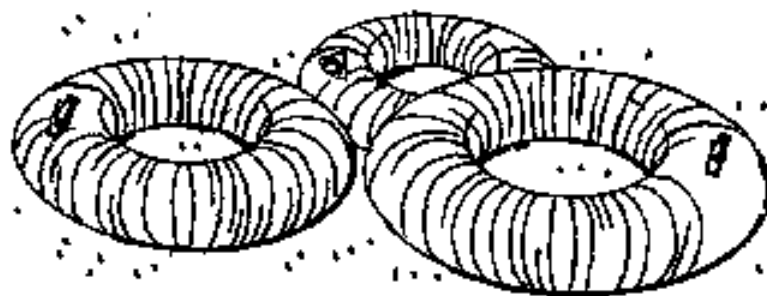


54. You can also use tubes from automobiles. However, these are smaller so you will need two or even three.
55. Try to get a large tube because it is easier to attach one large tube than two or three small ones.
56. First, check each tube that you are going to use for leaks. **Each tube must be airtight.** To check a tube for leaks fill it with air.

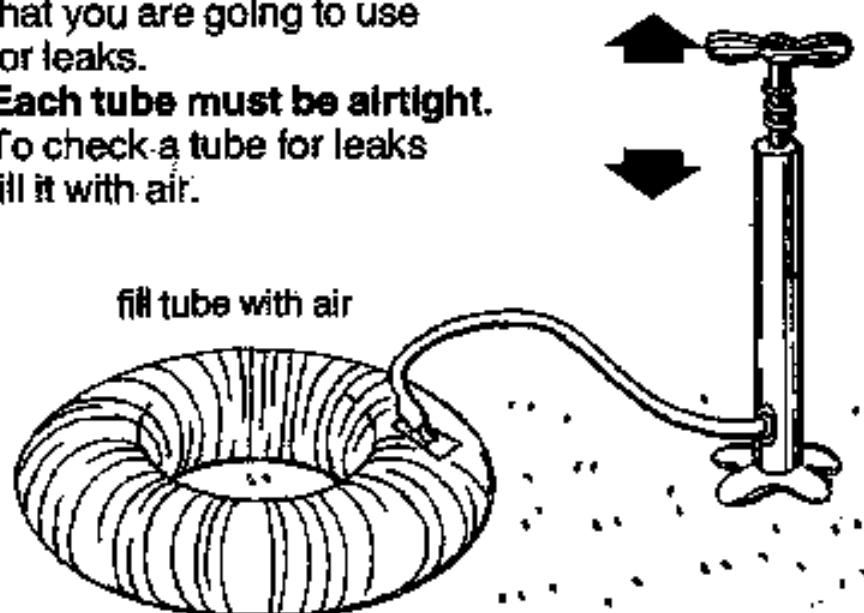


57. Then put the tube in water.
You can put it in a pond
or in a quiet stream.
58. Turn the tube slowly under the water.
Look for air bubbles.
If you see any bubbles,
mark each place on the tube.

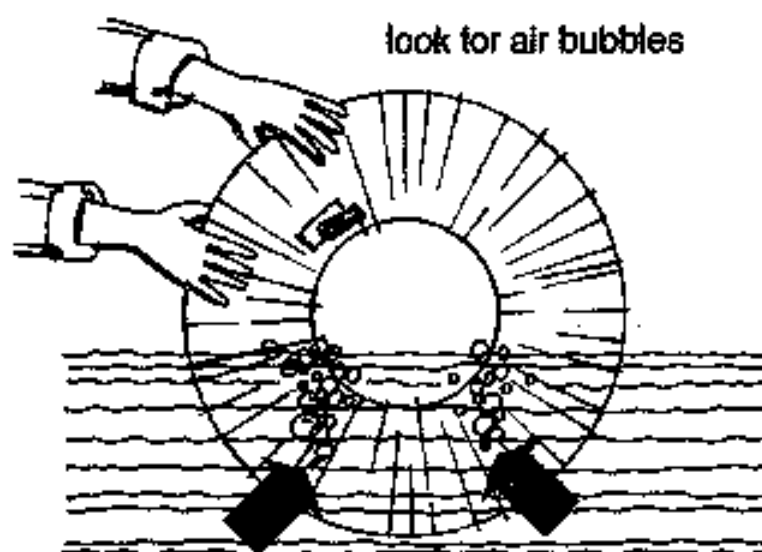


59. Let the tube dry.
When it is completely dry,
repair all of the leaks.

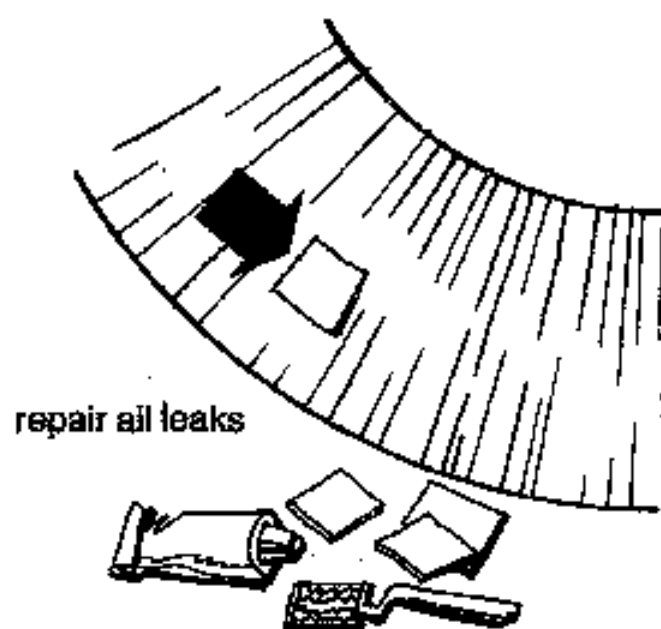


60. Fill the tube with air and put it in the water again to make sure that you have repaired all of the leaks well.

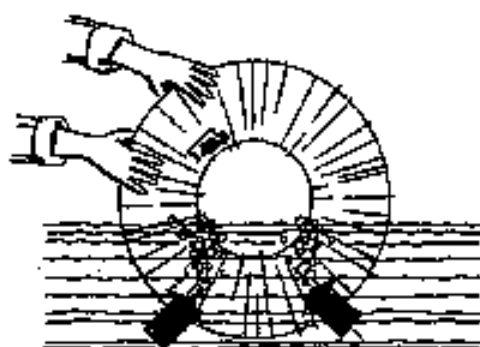


put in water again
to check for leaks

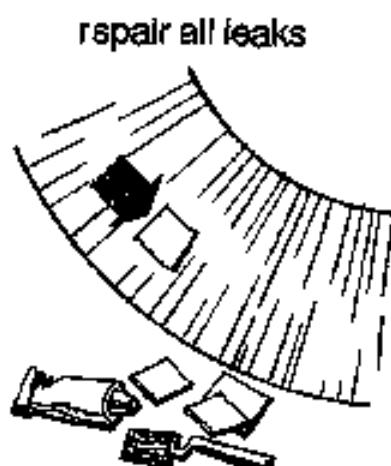

61. If there are still leaks, start all over again. **It is very important to seal all leaks carefully.**
62. When all the leaks are sealed let all of the air out. To do this, unscrew the cap of the air inlet and remove the valve.

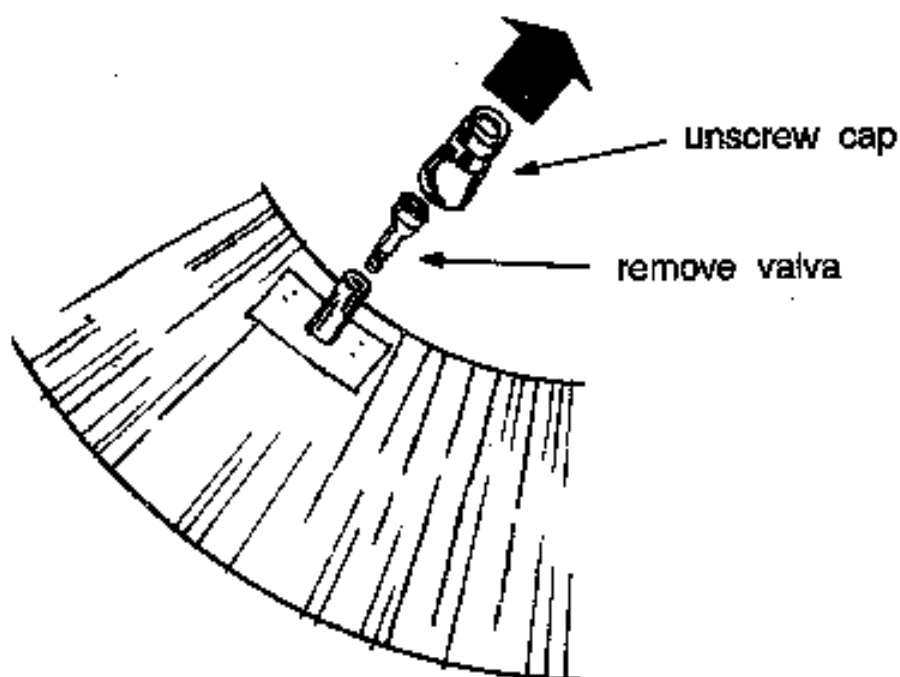

63. Roll the tube very tightly.
If you have a smooth, round pole,
you can roll the tube around this.
64. When the tube is tightly rolled
and there is **no** air in it,
screw the cap on the air inlet.
This is to keep more air
from getting inside.

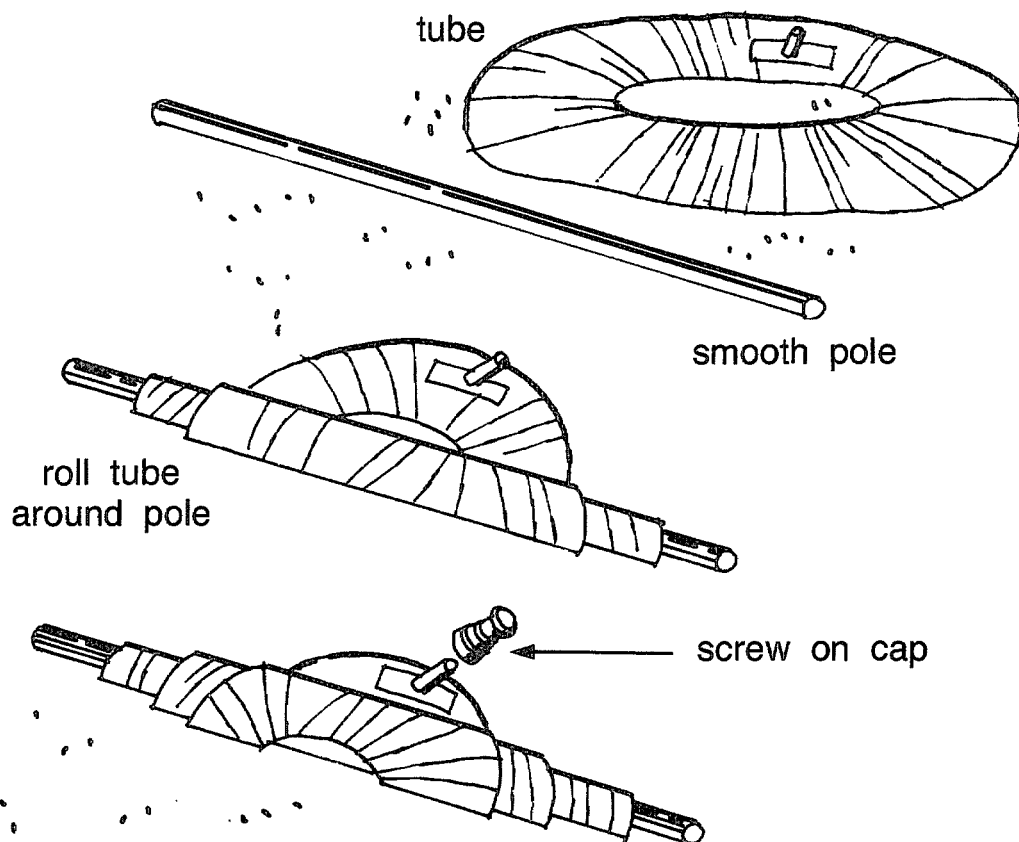


Note

When you screw the cap
on the air inlet,
do not put the valve back,
and keep the inner tube rolled up
until you attach the short gas line
(see Item 70 in this booklet).


65. Now you are ready
to attach the gas holder.

Attaching the gas holder


66. Cut a short piece from one end of the 12-metre gas line.
This is to attach the inner tube to the pipe T-piece on the oil drum.
67. This piece should be long enough to connect the T-piece and the inner tube without being tight.
If it is too tight, it may pull off.
68. Fold the short gas line at a place near the centre.
Tie the fold tightly with cord.
The drawing below will show you how.

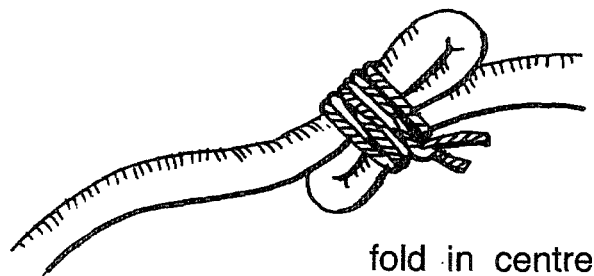

69. The fold will keep more air from getting into the inner tube when you attach it to the short piece of gas line.
70. Take the air inlet cap off the still-rolled inner tube and **attach the short gas line**.
Be sure to attach it tightly.
You may have to tie it with cord and seal it with tar or mastic.
Now you can unroll the inner tube (see the drawings on the next page).

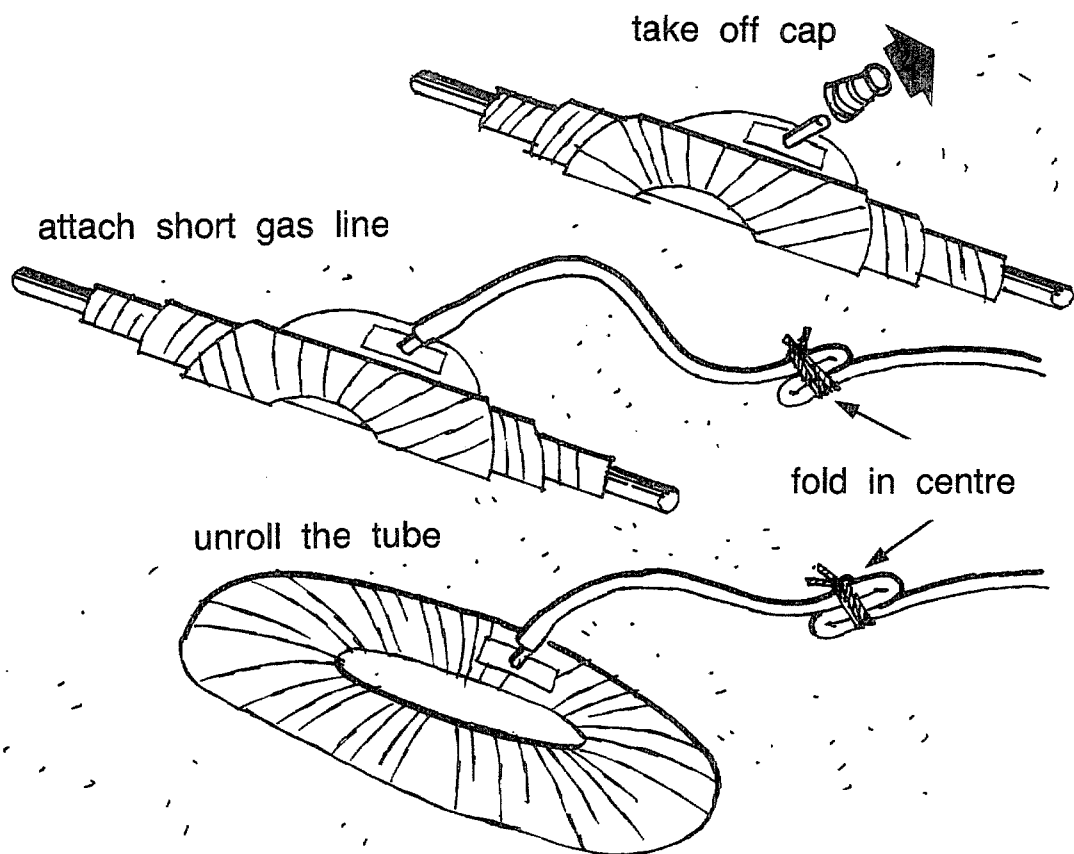


71. **It is very important to keep the gas holder from moving or the short gas line may pull off.**
72. If you are using a large inner tube, fit it over the oil drum and place it on the ground. The drum will keep the tube from moving.

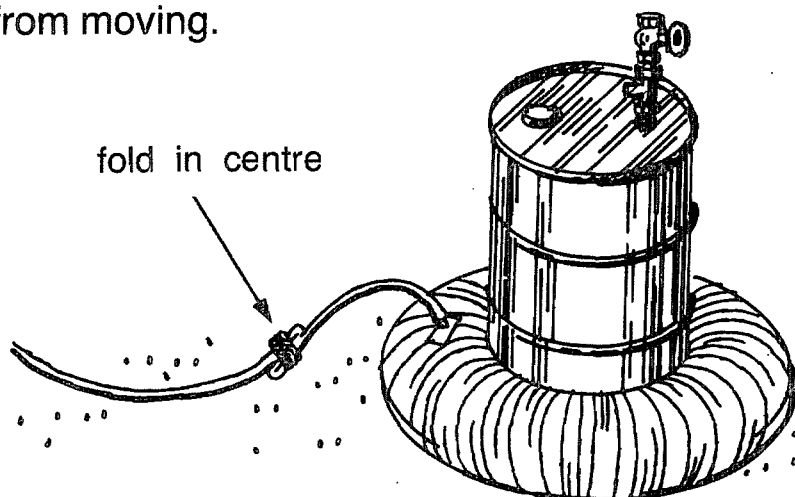


73. If you are using an inner tube that is too small to fit over the oil drum, you will have to keep it in place using wooden stakes.

wooden stakes
to hold the inner tube
in place

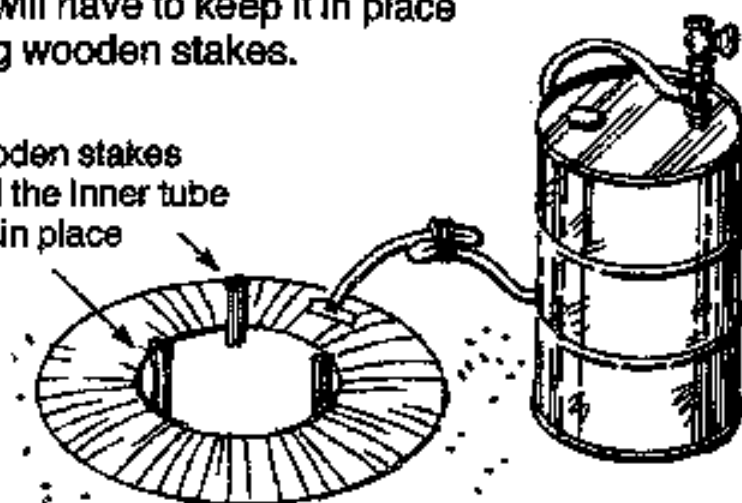



74. Connect the top of the short gas line to the pipe T-piece on the oil drum.

connect short gas line
to T-piece

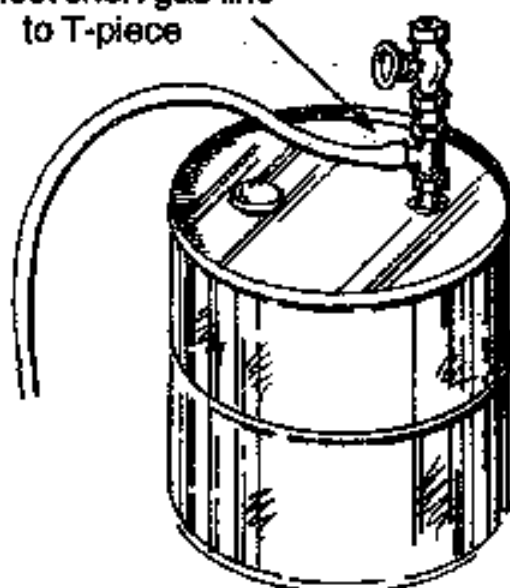

75. However, **do not** untie the told in the centre of the short gas line (see Item 101 in this booklet) or attach the long gas line to the valve (see Items 89 to 122 in this booklet) until you are told to do so.

76. The drawings below show you how to connect both large and small inner tubes to this kind of biogas unit.

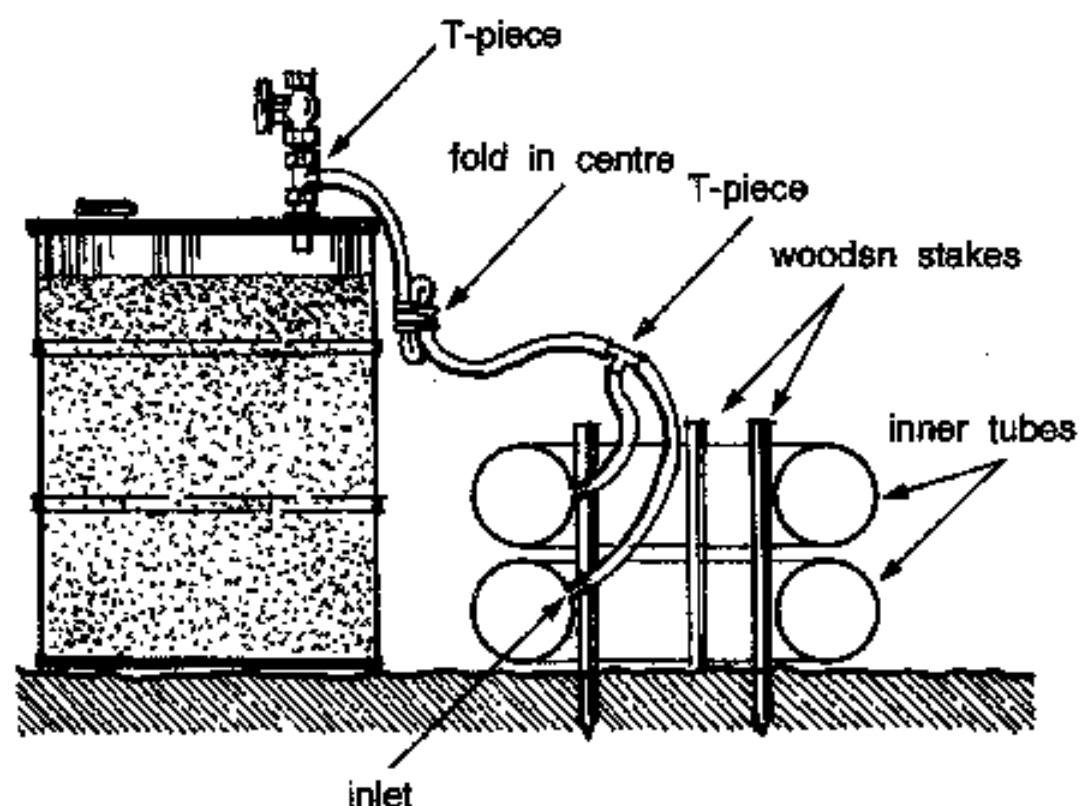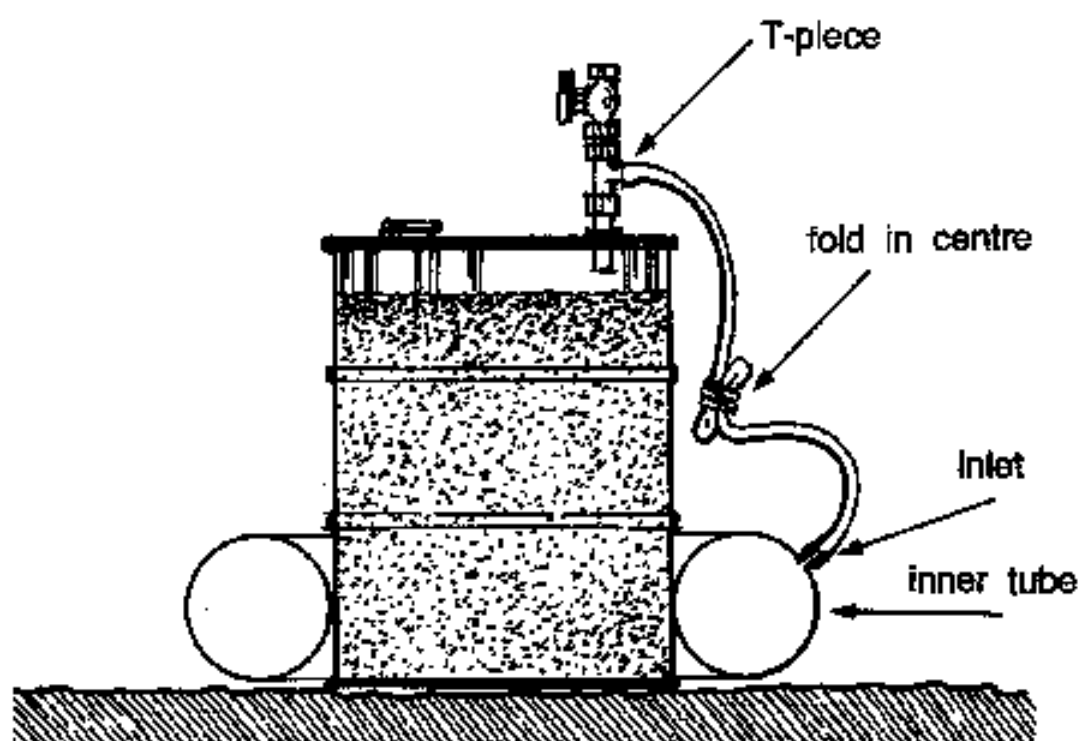

77. Now you are ready to put waste into the oil drum.


PUTTING IN THE WASTE

The waste materials

78. You have already been told that this biogas unit is very much like the one that you learned how to build in Booklet No. 31.
79. Since your new biogas unit is much the same as your old one, you can use the same kind of wastes in the same way. Items 58 to 66 in Booklet No. 31 tell you how to prepare them.



cow, pig, chicken manure

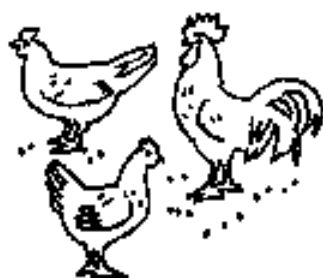

plant wastes



crop wastes


80. With the new unit,
as with your old unit,
you put in all of the waste
at **one** time when you begin.
Then, when **all** of the gas is made,
you take out **all** of the waste,
use it for fertilizer,
and begin all over again.
81. However, be especially careful
to mix the waste and water well.
Once this kind of unit is closed
you should not open it
until **all** of the gas is made.
82. You **cannot** stir it
or add more water
if the waste becomes too thick
as you could with your old unit
(see Items 94 to 96
in Booklet No. 31).
83. So, the waste and water mixture
for the new biogas unit
should be thin enough to pour easily.
84. It should be about as thin
as the paint or the whitewash
that you use to paint your house.

The starter

85. If your old unit is working,
take 4 litres of waste from it
to use as a starter when you begin.
86. However, if you do not have any waste
to use as a starter
you will have to make some.
Items 67 to 70 in Booklet No. 31
will tell you how to do it.


Putting waste in this biogas unit

87. When you are ready to add the waste, unscrew the plug in the waste hole and put it carefully aside. Put a large funnel in the hole.

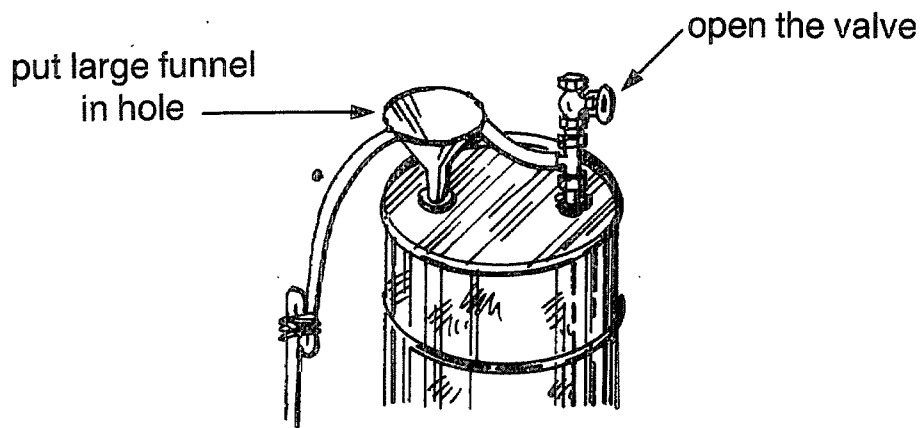


88. Open the valve so that when you add the waste the air that is inside the drum will be forced out through the gas outlet.
89. **You have not yet been told to attach the gas line and you should not have done so** (see Item 75 in this booklet).
90. Put three buckets of waste and three buckets of water in a large container and mix it well (see Item 84 in this booklet).

mix three buckets of waste and three buckets of water

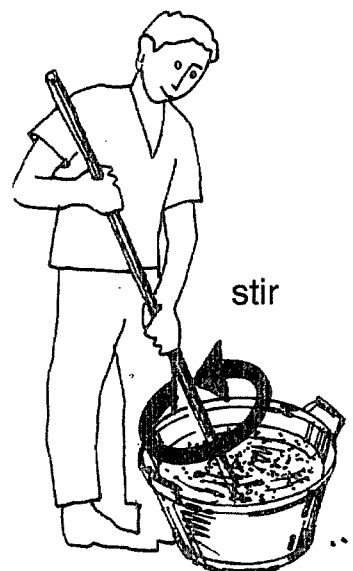

91. When the waste and water are well mixed, dip out a bucketful and pour it through the funnel into the oil drum.

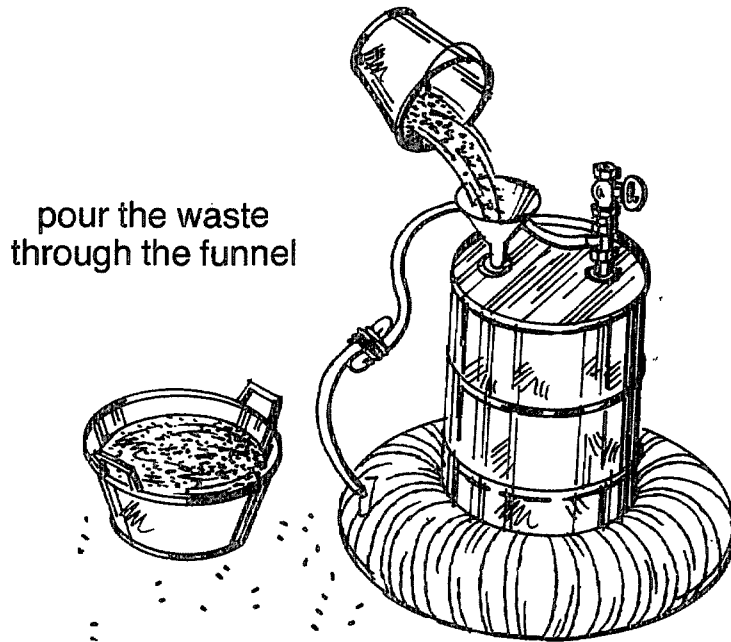


92. If it does not flow through the funnel, add a **little** more water to the waste mixture in the large container.



93. Then try to pour another bucketful through the funnel. If the mixture is thin enough to go through the funnel, pour the rest into the drum.


94. Again put three buckets of waste and three buckets of water in the large container and mix it as before.
95. Pour this mixture into the drum. Then take out the funnel. Put a pole long enough to reach the bottom of the drum into the waste hole and stir all the mixture well.
96. Continue in this way until the waste in the drum is about 10 centimetres from the top. Now put in about 4 litres of **starter** and stir it well.

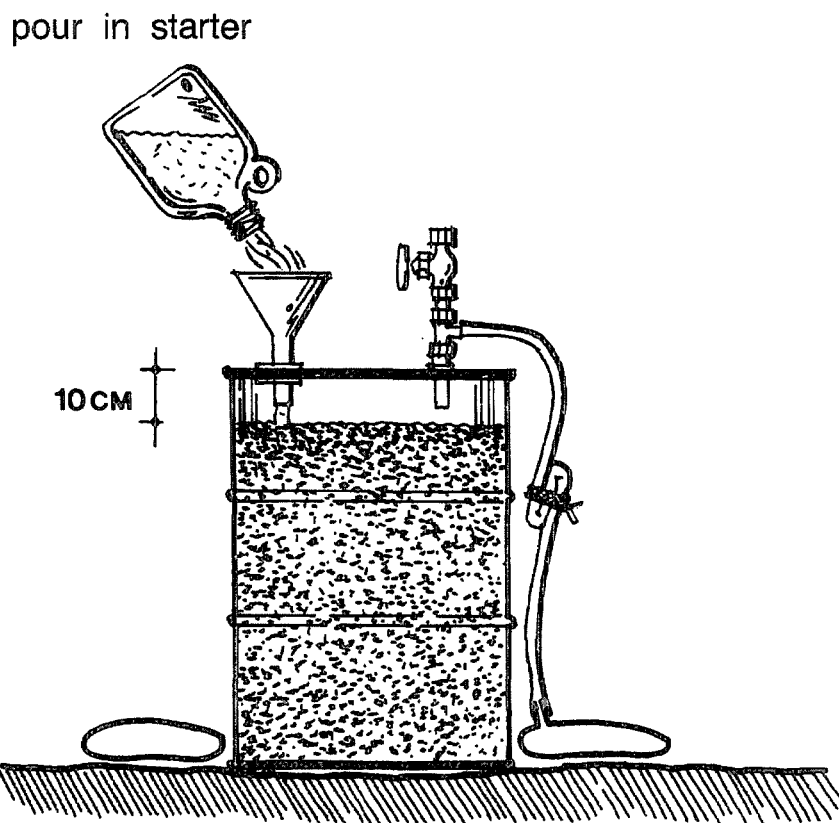

97. The starter, which has already begun to work, will help you to make gas sooner.

After the waste is in

98. Close the waste hole tightly and turn off the valve.
After about two weeks, open the valve and let out all the gas that has collected in the top of the drum.
99. **While you are letting the gas out, be very careful not to have fire near the biogas unit.**
100. Listen as the gas escapes.
When you hear the sound of the gas stop, turn off the valve **quickly**.
This is to keep air from getting into the drum.

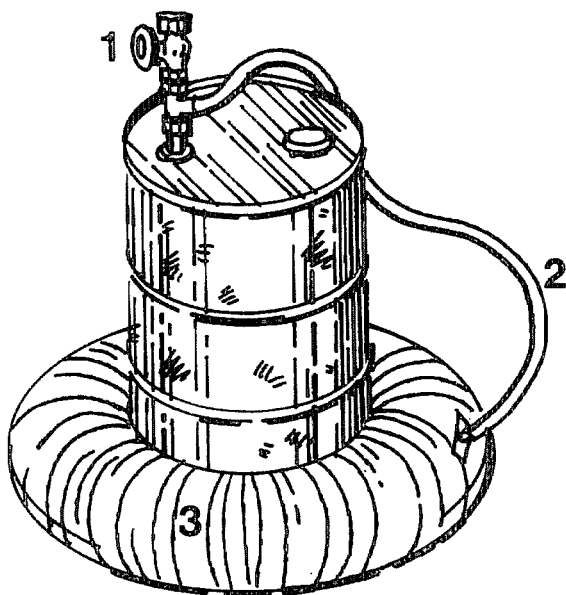


- 1 open the valve to let out the gas, then close it
- 2 untie fold in centre
- 3 when the tube begins to swell, gas is being made

101. **Now** you can untie the fold in the centre of the short gas line that runs to the inner tube gas holder. When you see the tube begin to swell, you will know that gas is being collected.

102. If you find that gas is leaking from the top of the drum after the unit has begun to work, seal the leaks with tar, mastic or paint as you were told to do in Item 47 in this booklet.
103. If gas is leaking around the gas outlet, T-piece, valve or inner tube, tighten them.

Note

A good way to check for leaks after the biogas unit has begun to work is to put soapy water on the drum and on the joints of the parts and lines. If you see bubbles anywhere you will know that there is a leak. Seal all leaks as you have been told to do.

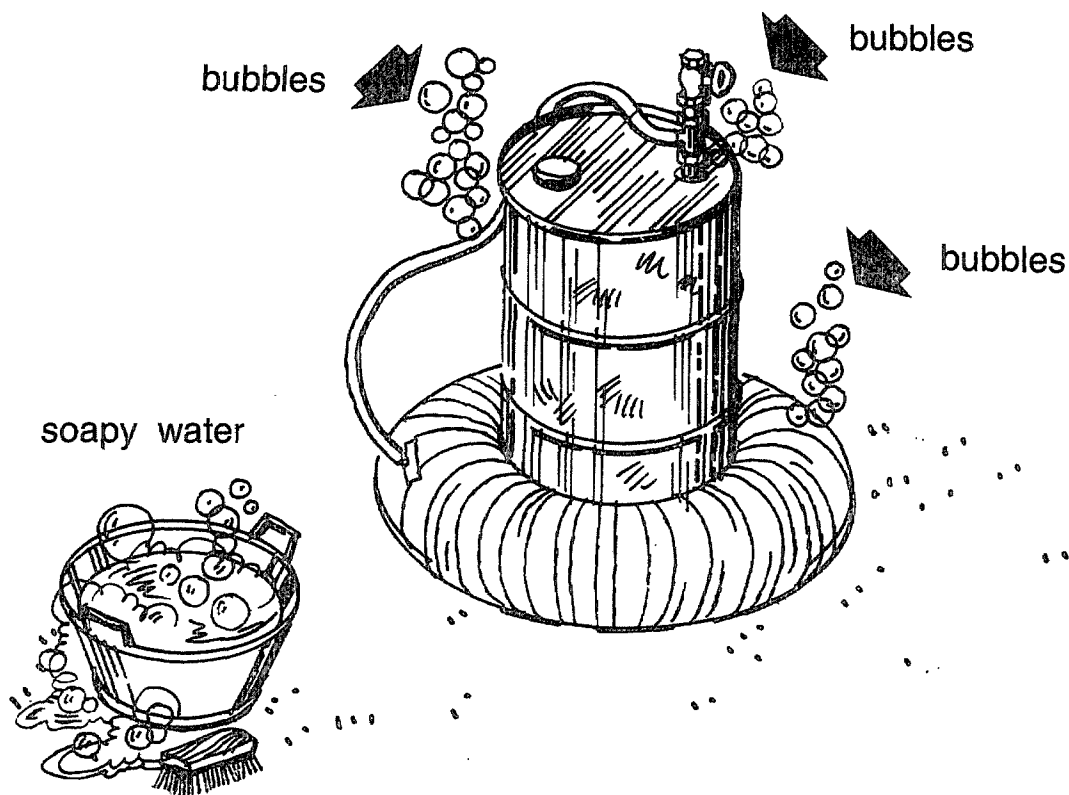


TIME

- 104. It may take up to three weeks
or even a month
for the waste in your new biogas unit
to begin making gas.
After that, the unit will continue
to make gas for about eight weeks.
- 105. During these eight weeks
half of the gas will be made
in the first two or three weeks
and the rest
in the last five or six weeks.
- 106. If you find that too little gas
is being made in the last weeks,
empty the unit and start again.

TEMPERATURE


107. You have been told
in Booklet No. 31
that **biogas**
is best produced
at a temperature
between 32 and 37°C.
When the temperature
is below 15°C,
almost no gas is made.

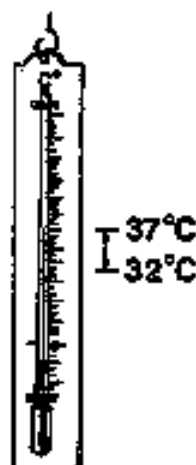

Cold weather protection

108. If the temperature where you live
often falls below 15°C,
you can keep the waste mixture warm
by covering this biogas unit
with plant materials such as
leaves, grass, straw or maize stalks.

put leaves, grass, straw
or maize stalks
around the oil drum

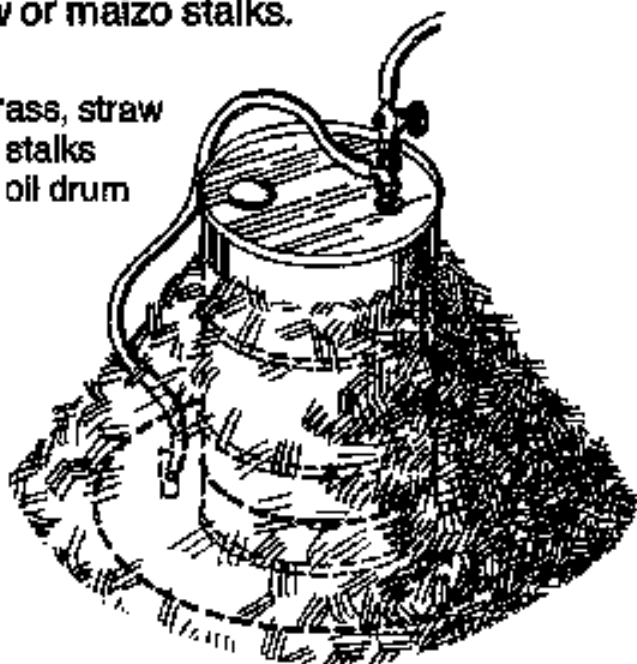


109. However, as you were told
in item 28 in this booklet,
you must not put this unit underground
as you could with your old unit
or you will not be able to shake it
to break up the scum

SCUM


110. Sometimes a hard layer of scum may form on top of the waste mixture in your biogas unit. If this happens, less gas will be made and gas will not collect in the inner tube.

hard layer
of scum

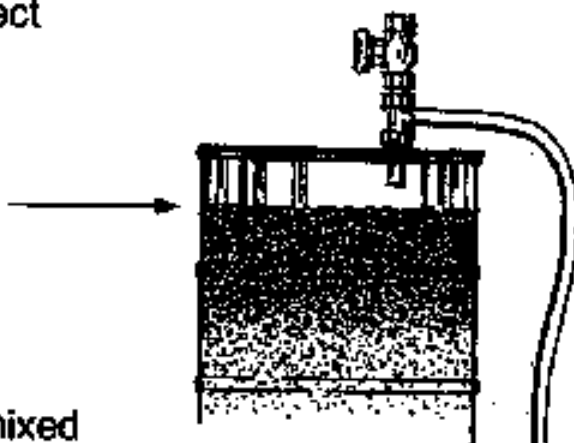

111. If the waste is well mixed before it is put into the unit, there will be less chance for scum to form and your biogas unit will make gas well.
112. Scum is more likely to form if you use plant materials than if you use only animal waste.
118. To keep scum from forming, shake your biogas unit from time to time. The drawing below shows you how.



shake the oil drum;
however, do not hold
the pipe or valve
when shaking

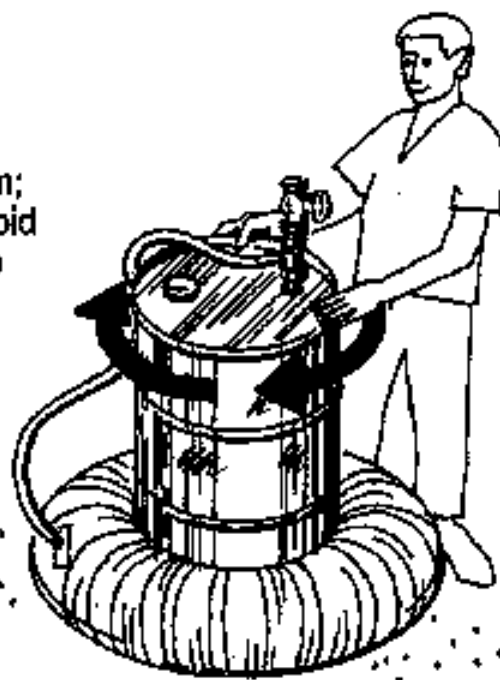



WHEN THE GAS IS MADE

- 114. **Do not burn
the first gas that is made
in your biogas unit.
It may have air in it
and could explode.**
- 115. **A few days after the inner tube
has begun to swell with gas,
open the valve
and let out all of the gas
that has been collected.**
- 116. **While you are letting the gas out
be very careful not to have fire
near the biogas unit.**
- 117. **After the valve is open
you will have to force the gas
out of the inner tube or tubes.**
- 118. **You can force gas out of a tube
by rolling it as you were told to do
in Item 63 in this booklet,
or by putting a weight on it
such as pieces of wood or stones.**
- 119. **The drawings on the next page
show you how to force air
out of a biogas unit
with one or more inner tubes.**
- 120. **When all of the gas is out,
close the valve
and your biogas unit
will begin to collect gas again.**
- 121. **If you have done this carefully,
the next gas that is made
will have no air in it
and will be safe to burn.
Do not open the unit again
until all the gas has been made.**



leave large tube
attached to the oil drum
and force out gas
with pieces of wood

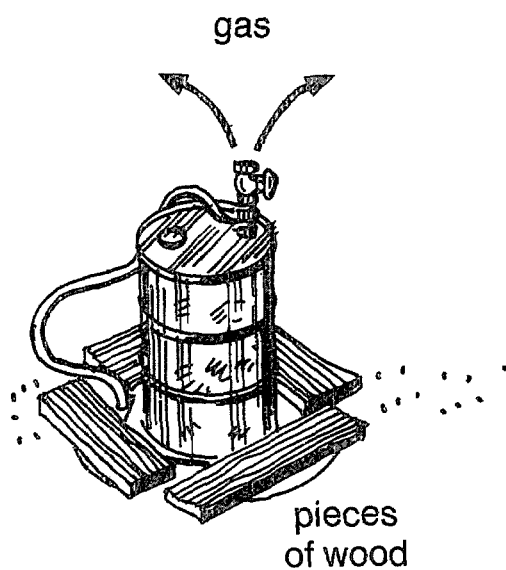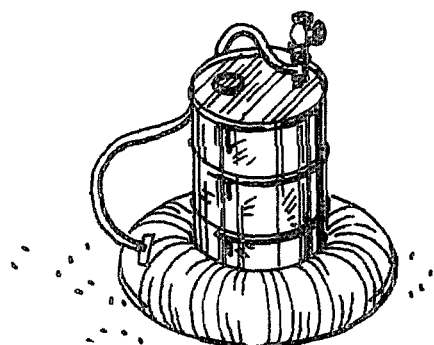


remove large tube
and force out gas
by rolling it

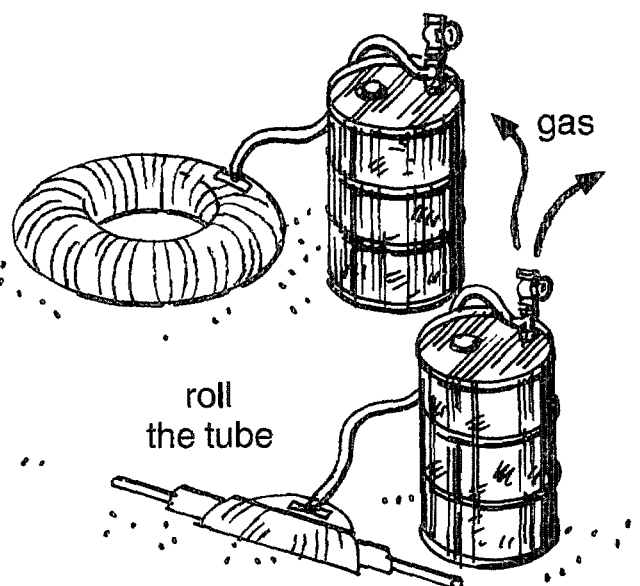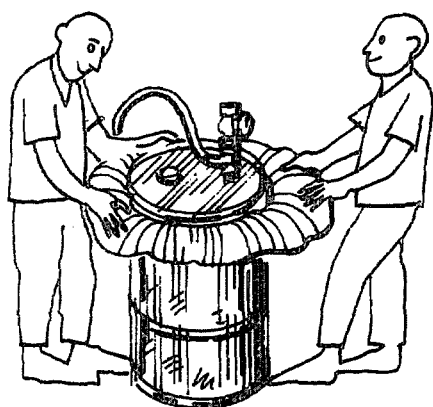

remove wooden stakes
and force out gas
with pieces of wood

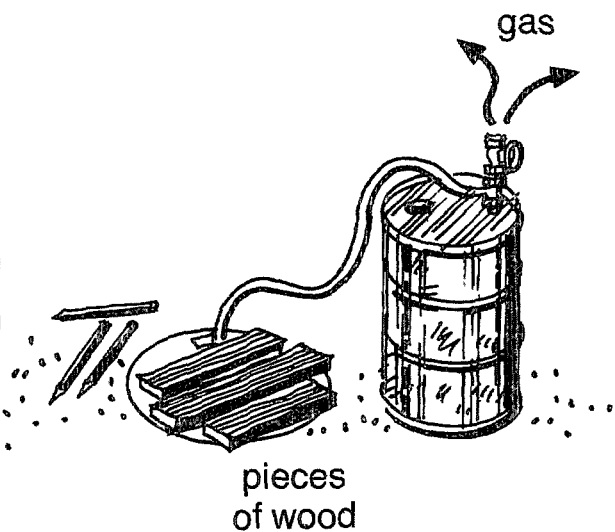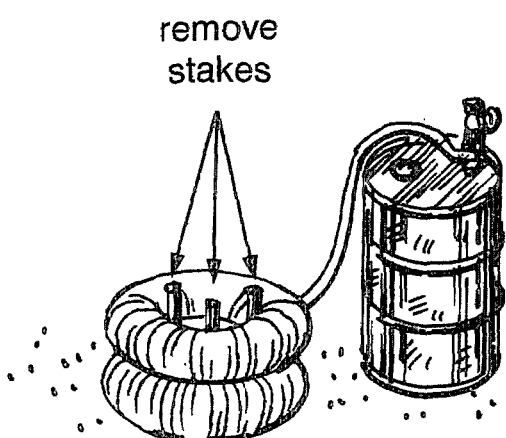

122. Now you can attach the gas line to the top of the valve.
However, do not open the valve until the inner tube is half full.
Later, you can help to push the gas out of the inner tube by putting a few stones or bricks on it.

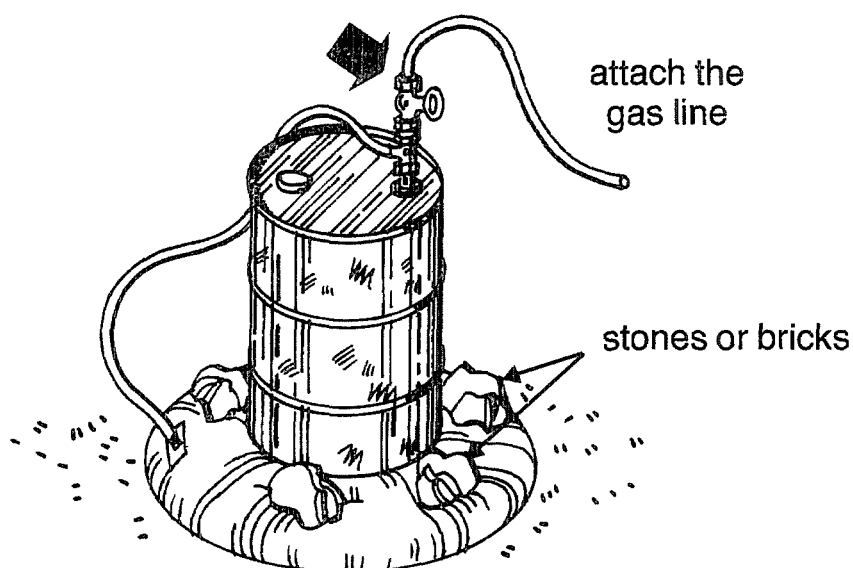


123. Items 108 to 114 in Booklet No. 31 tell you how to use biogas for cooking and how to clean the burner.
124. After all the gas has been made, take the unit apart and empty out the fertilizer. Items 115 to 118 in Booklet No. 31 tell you how to use the fertilizer.
125. However, be sure to keep about 4 litres of the fertilizer to be used as a starter for the next time.


keep 4 litres
of fertilizer
as a starter



126. Clean the unit carefully and check for leaks.

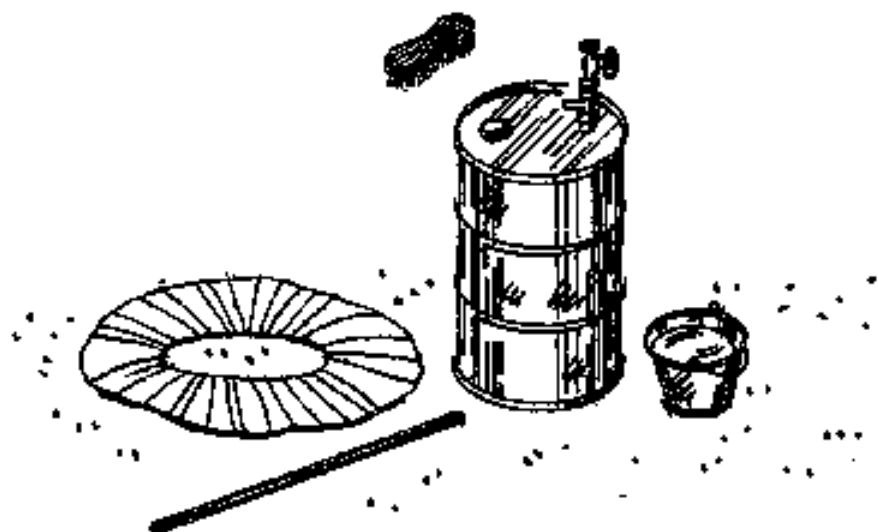



127. Now fill the unit with new waste material and add the starter. Close the unit tightly and it will begin to make gas again.

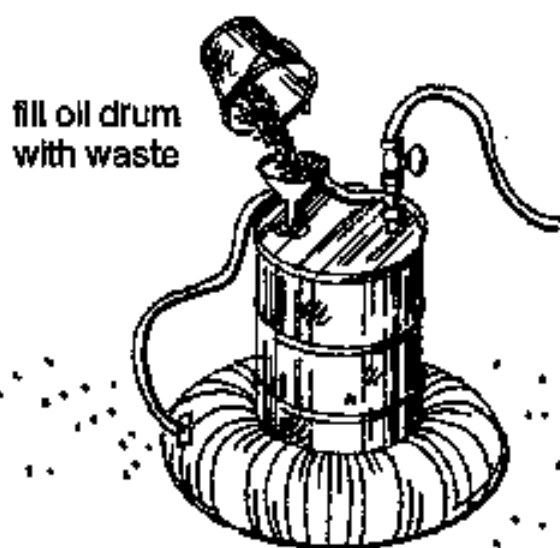

128. Remember, every time you start again, do not burn the first gas that is made.


TAKING CARE OF YOUR BIOGAS UNIT

129. **Always be careful
when you are near a biogas unit
because gas may be leaking.**
130. **If gas is leaking
and you breathe in too much of it,
it can make you very sick.**
131. **Never build a fire,
smoke, or even light a match
near the unit,
because if gas is leaking
it may explode.**

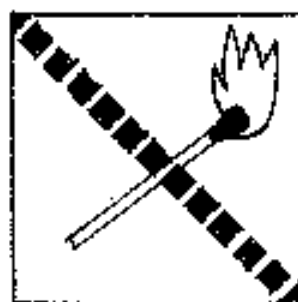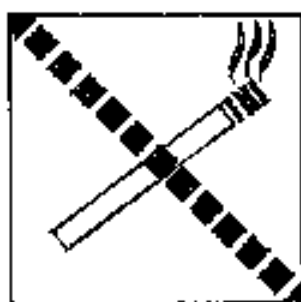


132. **Check your biogas unit
and gas lines often
to be sure that there are no leaks.
The note on page 34 in this booklet
tells you how to check for leaks
in a working biogas unit.**

133. If the oil drum begins to rust, coat it with the kind of paint that is used to paint metal.

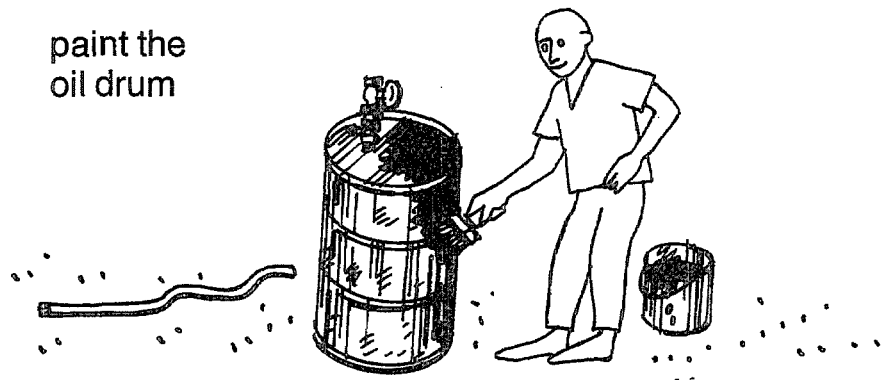


134. About once each year, when you are taking the unit apart, wash it inside and outside with warm soapy water as you were told to do in Items 19 to 26 in this booklet.

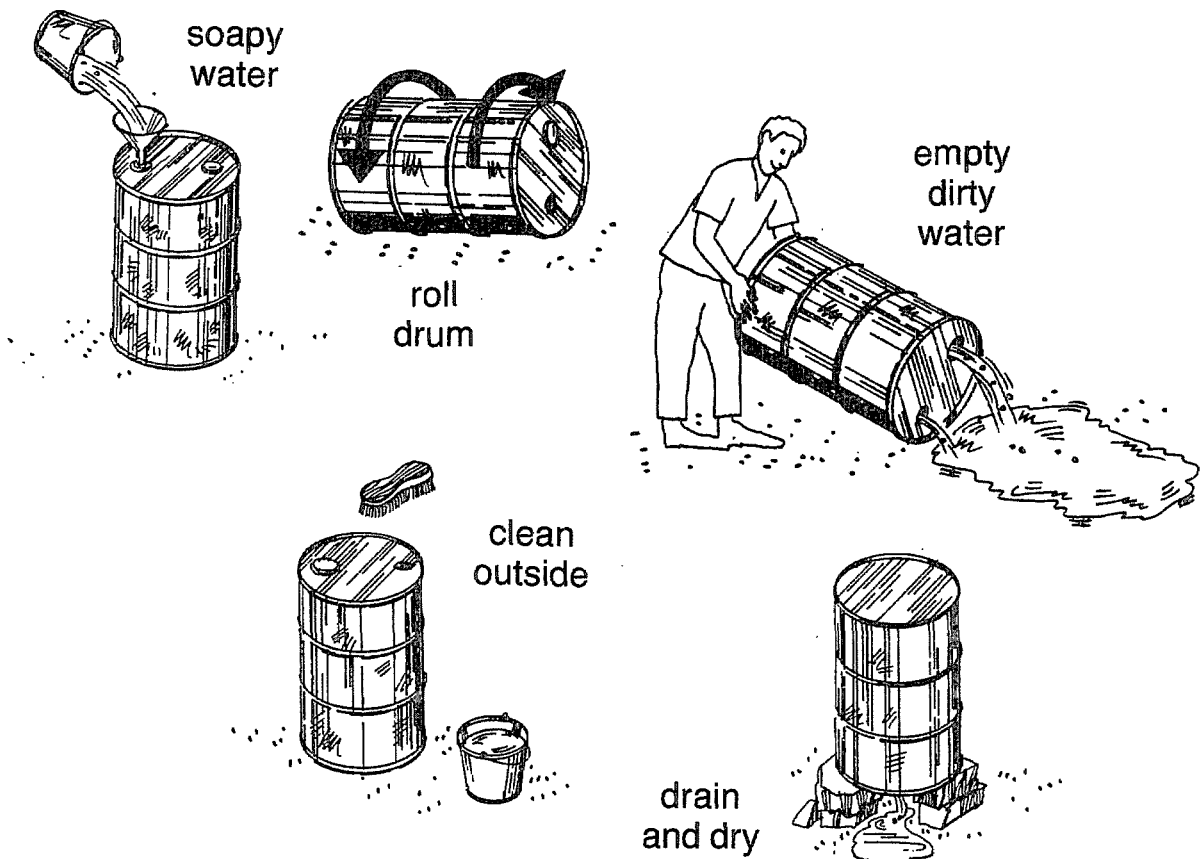

135. Then paint it inside and outside as you were told to do in Items 47 and 49 in this booklet.

MAKING MORE BIOGAS

136. As with your old biogas unit, the easiest way to make more gas is to build one or more small units and get gas from them all.
137. If you can get more oil drums, pipe, T-pieces, valves, inner tubes and gas lines, and if you have enough time, you can build and run more units.
138. The drawings below show you how to connect several units to the same gas line with T-pieces.

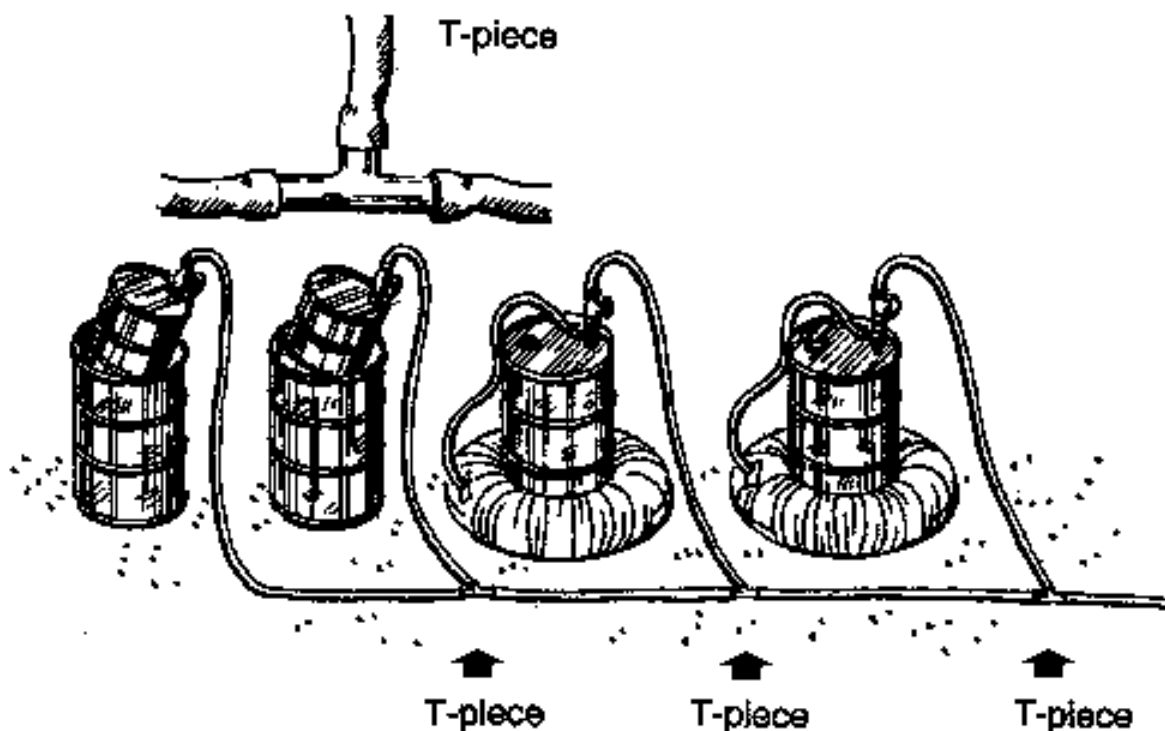


139. As you have already been told in Booklet No. 31, when you have several biogas units, fill them with waste at different times. That way, when all the gas in one unit has been used, you will get gas from another unit that is still working.

WHAT MORE CAN YOU DO?


140. The biogas unit that you learned to build in Booklet No. 31 and the biogas unit that you learned to build in this booklet are both small units that use one drum for the waste holder.
141. With both of these small units you put in all of the waste when you first began. Then, when all of the gas was made, you cleaned out the unit, used the waste as fertilizer and started all over again.

clean out
unit

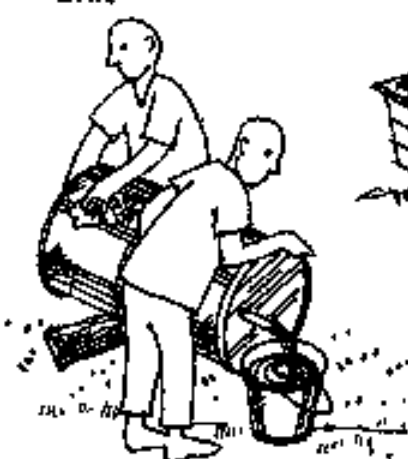

use waste
as fertilizer


start again

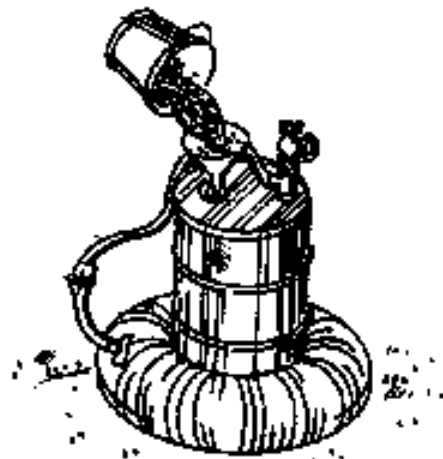

142. By building and using either or both of these units, you learned a lot from your experience.
143. Now, let us look at still another biogas unit that you can build using what you have learned to help you.


Another kind of biogas unit

144. This unit is bigger and better than your first two units. It is also more difficult to build and to use.
145. This kind of biogas unit can also be built using oil drums with the same kind of pipe fittings that you used before.
146. However, it can be built much bigger than your old units. You can use several oil drums instead of only one. So, you can make more gas than you did before.

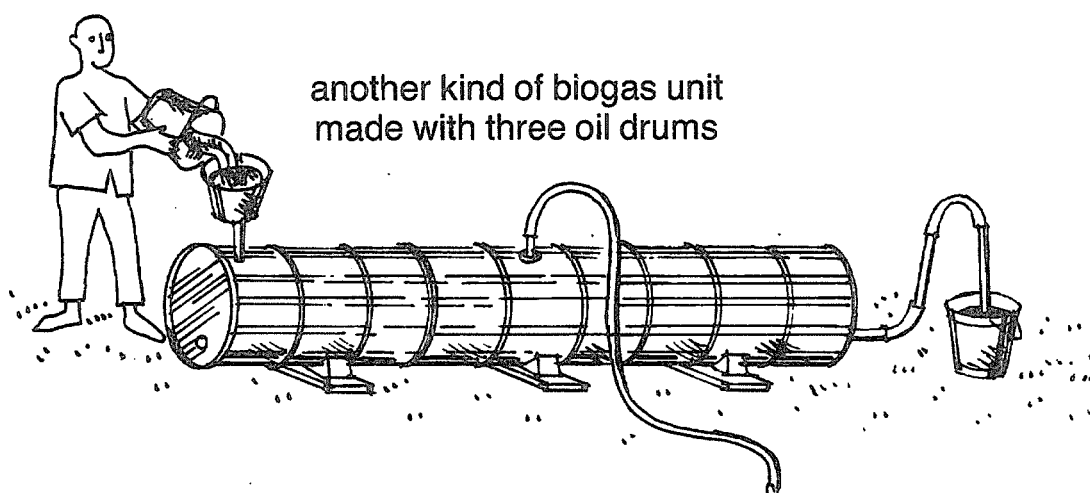

147. This kind of unit is also filled with waste when you first begin.
148. Then, after the unit begins to make gas, you continue to put in waste from time to time. You may do this every few days or you may do it every week.

149. However, when you put new waste into this kind of unit, an equal amount of waste is pushed out of the unit.

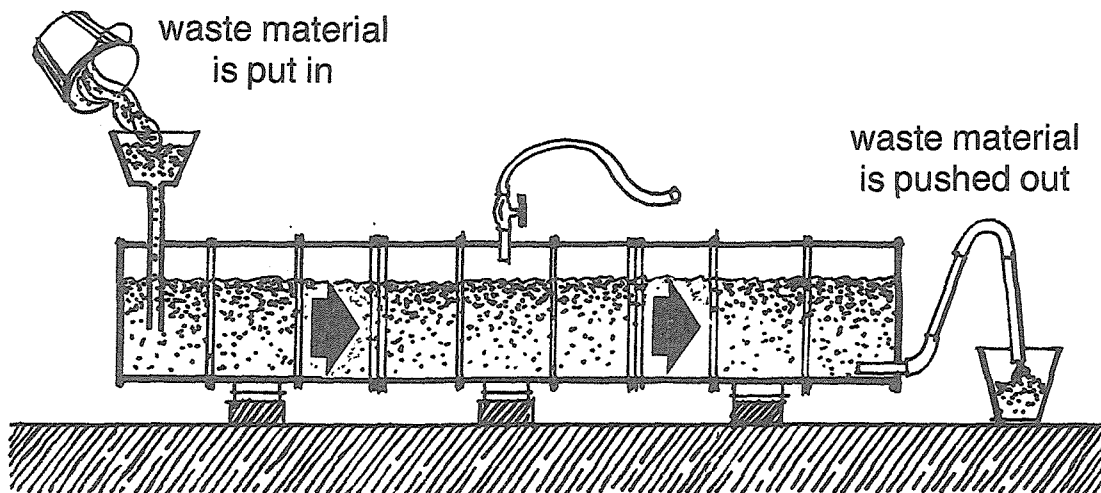

150. With fresh waste material always moving through the unit, it will make biogas for a much longer time.
151. You will learn more about this bigger and better unit in a later booklet in this series.

WHERE TO PURCHASE FAO PUBLICATIONS LOCALLY

Algeria	Société nationale d'édition et de diffusion, B2, rue Didaouche Mourad, Alger.
Argentina	Librería Agropecuaria S.A., Páez 743, 1025 Buenos Aires.
Australia	Hunter Publications, 68A Gipps Street, Collingwood, Vic. 3068; Australian Government Publishing Service, Sales and Distribution Branch, Menzies Road, Kingston, A.C.T. 2804. Bookshops in Adelaide, Melbourne, Brisbane, Canberra, Perth, Hobart and Sydney.
Austria	Gesellschaft, Graben 31, 1011 Vienna.
Bahrain	United Schools International, PO Box 728, Manama.
Bangladesh	Association of Development Agencies in Bangladesh, House No. 48A, Road No. 5A, Dharmapal R/A, Dhaka.
Belgium	M. J. De Lathau, 202, avenue du Roi, 1060 Brussels. C.O.P. 009-0808983-13.
Bolivia	Los Amigos del Libro, Perú 6712, Casilla 450, Cochabamba; Mercado 1316, La Paz.
Botswana	Botswana Books (Pty) Ltd, PO Box 1532, Gaborone.
Brazil	Fundação Getúlio Vargas, Praia de Botafogo 190, C.P. 8052, Rio de Janeiro; Livreria Consulto Ltda, Rua Consolação, 348 - 2º andar, Caixa Postal 19196, São Paulo.
Brazil-Peruvisian	SET Trading Sdn Bhd, Bangunan Teluk No. 385, Jin 5/5B, PO Box 227, Petaling Jaya, Selangor.
Canada	Renovet Publishing Company Ltd, 61 Sparks Street, PO Box 1006, Station B, Ottawa, Ont. K1P 6R1; Tel.: (613) 226 8986. Toll-free calls in Canada: 1-800-267-4164; Telex: 053-4836.
Chile	Librería - Oficina Regional FAO, Avda. Santa María 6700, Casilla 10095, Santiago. Teléfono: 226-80-55.
China	China National Publications Import Corporation, PO Box 88, Beijing.
Congo	Office national des librairies populaires, B.P. 577, Brazzaville.
Costa Rica	Librería, Imprenta y Litografía Lehmann S.A., Apartado 10011, San José.
Cuba	Editoriales Cubanas, Escuela de Comercio Exterior de Publicaciones, Obispo 461, Apartado 606, La Habana.
Cyprus	MAM, PO Box 1722, Nicosia.
Czechoslovakia	ARTIA, Va Smetanech 30, PO Box 780, 111 27 Prague 1.
Denmark	Monkegaard Export and Subscription Service, 85, Nørre Søgade, DK 1370 Copenhagen K.
Dominican Rep.	Fundación Dominicana de Desarrollo, Casa de las Gorgolas, Mercedes 4, Apartado 867, Zona Postal 1, Santo Domingo.
Ecuador	Bu Librería Cia. Ltda., García Moreno 1172 y Mejía, Apartado 2568, Quito.
El Salvador	Librería Cultural Salvadoreña, S.A. de C.V., 7ª Avenida Norte 121, Apartado Postal 2886, San Salvador.
Finland	Akateeminen Kirjakauppa, 1 Kaikkasaku, PO Box 126, 00101 Helsinki 10.
France	Éditions A. Pedone, 15, rue Bouffé, 75005 Paris.
Germany, F.R.	Alexander Horn Internationale Buchhandlung, Friederichstr. 39, Postfach 3340, 8200 München 30.
Ghana	Fida Enterprises, PO Box 14129, Accra; Ghana Publishing Corporation, PO Box 3832, Accra.
Greece	G.C. Eleftheroudakis S.A., 4 Mile Street, Athens (T-126); John Mihailopoulos & Son S.A., 75 Heriou Street, PO Box 73, Thessaloniki.
Guatemala	Distribuciones Culturales y Técnicas "Arteamor", 5ª Avenida 12-11, Zona 1, Apartado Postal 2823, Guatemala.
Guyana-Bissau	Conselho Nacional da Cultura, Avenida da Unidade Africana, C.P. 294, Bissau.
Guyana	Guyana National Trading Corporation Ltd, 45-47 Water Street, PO Box 805, Georgetown.
Haiti	Librerie "A la Caravelle", 25, rue Boire Fol, B.P. 111, Port-au-Prince.
Hong Kong	Swindon Book Co., 13-15 Lock Road, Kowloon.
Hungary	Kultura, PO Box 148, 1226 Budapest 62.
Iceland	Snaebjörn Jonsson and Co. h.f., Hafnarstræti 9, PO Box 1181, 101 Reykjavík.
India	Oxford Book and Stationery Co., Scindia House, New Delhi 110001; 17 Park Street, Calcutta 700016; Oxford Sanscription Agency, Institute for Development Education, 1 Andrews Ave, Kottarak, Madras 600010.
Indonesia	P.T. Inti Buku Agung, 13 Kwitang, Jakarta.
Iraq	National House for Publishing, Distributing and Advertising, Jamhuri Street, Baghdad.
Ireland	The Controller, Stationery Office, Dublin 4.
Italy	Distribution and Sales Section, FAO, Via delle Terme di Caracalla, 00100 Rome; Libreria Scientifica Dott. Lucio de Blasio "Aedon", Via Marsigli 16, 20120 Milan; Libreria Commissionaria Sansoni S.p.A. "Ugoe", Via Lemaitre 45, C.P. 552, 50121 Florence.
Japan	Maruzen Company Ltd, PO Box 5050, Tokyo International 100-31.
Kenya	Text Book Centre Ltd, Kiljabe Street, PO Box 47540, Nairobi.

WHERE TO PURCHASE FAO PUBLICATIONS LOCALLY

Korea, Rep. of	Eulwoo Publishing Co. Ltd, 46-1 Susong-Dong, Jöngro-Gu, PO Box 362, Kwangwha-Mun, Seoul 110.
Kuwait	The Kuwait Bookshops Co. Ltd, PO Box 2942, Safat.
Luxembourg	M. J. De Lannoy, 202, avenue du Roi, 1060 Bruxelles (Belgique).
Malaysia	SST Trading Sdn. Bhd., Bangunan Tekno No. 385, Jln 5/59, PO Box 227, Petaling Jaya, Selangor.
Mauritius	Nalanda Company Limited, 30 Bourbon Street, Port-Louis.
Mexico	Dilitsa S.A., Puebla 182-D, Apartado 24-448, México 06700, D.F.
Morocco	Librairie "Aux Belles Images", 281, avenue Mohammed V, Rabat.
Netherlands	Keesing Publishing Company B.V., Hogehilweg 13, 1101 CB Amsterdam; Post Box 1118, 1000 BC Amsterdam.
New Zealand	Government Printing Office, Government Printing Office Bookshops: 25 Rutland Street; Mail orders: 85 Beach Road, Private Bag, CPO, Auckland; Ward Street, Hamilton; Mulgrave Street (Head Office), Cubacade World Trade Centre, Wellington; 159 Hereford Street, Christchurch; Princes Street, Dunedin.
Nicaragua	Libreria Universitaria, Universidad Centroamericana, Apartado 69, Managua.
Nigeria	University Bookshop (Nigeria) Limited, University of Ibadan, Ibadan.
Norway	Johan Grundt Tanum Bokhandel, Kari Johansgate 41-43, PO Box 1177, Sentrum, Oslo 1.
Pakistan	Mirza Book Agency, 65 Shahrah-e-Quaid-e-Azam, PO Box 729, Lahore 3; Sasi Book Store, Zaibunnisa Street, Karachi.
Panama	Distribuidora Lewis S.A., Edificio Dorasoi, Calle 25 y Avenida Balboa, Apartado 1634, Panamá 1.
Paraguay	Agencia de Librerías Nizza S.A., Casilla 2596, Eligio Ayala 1073, Asunción
Peru	Librería Distribuidora «Santa Rosa», Jirón Apurímac 375, Casilla 4937, Lima 1.
Philippines	The Modern Book Company inc., PO Box 632, Manila.
Poland	Ars Polona, Krakowskie Przedmiescie 7, 00-068 Warsaw.
Portugal	Livraria Bertrand, S.A.R.L., Rua João de Deus, Venda Nova, Apartado 37, 2701 Amadora Codex; Livraria Portugal, Dias y Andrade Ltda., Rua do Carmo 70-74, Apartado 2661, 1117 Lisbonne Codex.
Romania	Itexim, Str. 13 Decembrie No. 3-5, Bucharest Sector 1.
Saudi Arabia	The Modern Commercial University Bookshop, PO Box 394, Riyadh.
Singapore	MPH Distributors (S) Pte. Ltd, 71/77 Stamford Road, Singapore 6; Select Books Pte. Ltd, 215 Tanglin Shopping Centre, 19 Tanglin Road, Singapore 1024; SST Trading Sdn. Bhd., Bangunan Tekno No. 385, Jln 5/59, PO Box 227, Petaling Jaya, Selangor.
Somalia	"Samater's", PO Box 936, Mogadishu.
Spain	Mundi-Prensa Libros S.A., Castelió 37, 26001 Madrid; Librería Agrícola, Fernando VI 2, 28004 Madrid.
Sri Lanka	M.D. Gunasena & Co. Ltd, 217 Olcott Mawatha, PO Box 246, Colombo 11.
Sudan	University Bookshop, University of Khartoum, PO Box 321, Khartoum.
Suriname	VACO n.v. in Suriname, Domineestraat 26, PO Box 1841, Paramaribo.
Sweden	Books and documents: C.E. Fritzes Kungl. Hovbokhandel, Regeringsgatan 12, PO Box 16356, 103 27 Stockholm. Subscriptions: Vennergren-Williams AB, PO Box 30004, 104 25 Stockholm.
Switzerland	Librairie Payot S.A., Lausanne and Geneva; Buchhandlung und Antiquariat Heinemann & Co., Kirchgasse 17, 8001 Zurich.
Tanzania	Dar-es-Salaam Bookshop, PO Box 9030, Dar-es-Salaam; Bookshop, University of Dar-es-Salaam, PO Box 893, Morogoro.
Thailand	Suksapan Panit, Mansion 9, Rajadamnern Avenue, Bangkok.
Togo	Librairie du Bon Pasteur, B.P. 1164, Lomé.
Tunisia	Société tunisienne de diffusion, 5, avenue de Carthage, Tunis.
Turkey	Kultur Yayınları is-Türk Ltd Sti., Atatürk Bulvarı No. 191, Kat. 21, Ankara. Bookshops in Istanbul and Izmir.
United Kingdom	Her Majesty's Stationery Office, 49 High Holborn, London WC1V 6HB (callers only); HMSO Publications Centre, Agency Section, 51 Nine Elms Lane, London SW8 5DR (trade and London area mail orders); 13a Castle Street, Edinburgh EH2 3AR; 80 Chichester Street, Belfast BT1 4JY; Brazennose Street, Manchester M60 8AS; 258 Broad Street, Birmingham B1 2HE; Southey House, Wine Street, Bristol BS1 2BQ.
United States of America	UNIPUB, PO Box 1222, Ann Arbor, MI 48106.
Uruguay	Librería Agropecuaria S.R.L., Alzaibar 1328, c.c. 1755, Montevideo.
Yugoslavia	Jugoslovenska Knjiga, Trg. Republike 5/3. PO Box 36, 11001 Belgrade; Cankarjeva Založba, PO Box 201-IV, 61001 Ljubljana.
Zambia	Kingstons (Zambia) Ltd, Kingstons Building, President Avenue, PO Box 139, Ndola.
Other countries	Requests from countries where sales agents have not yet been appointed may be sent to: Distribution and Sales Section, FAO, Via delle Terme di Caracalla, 00100 Rome, Italy.